


ETNA

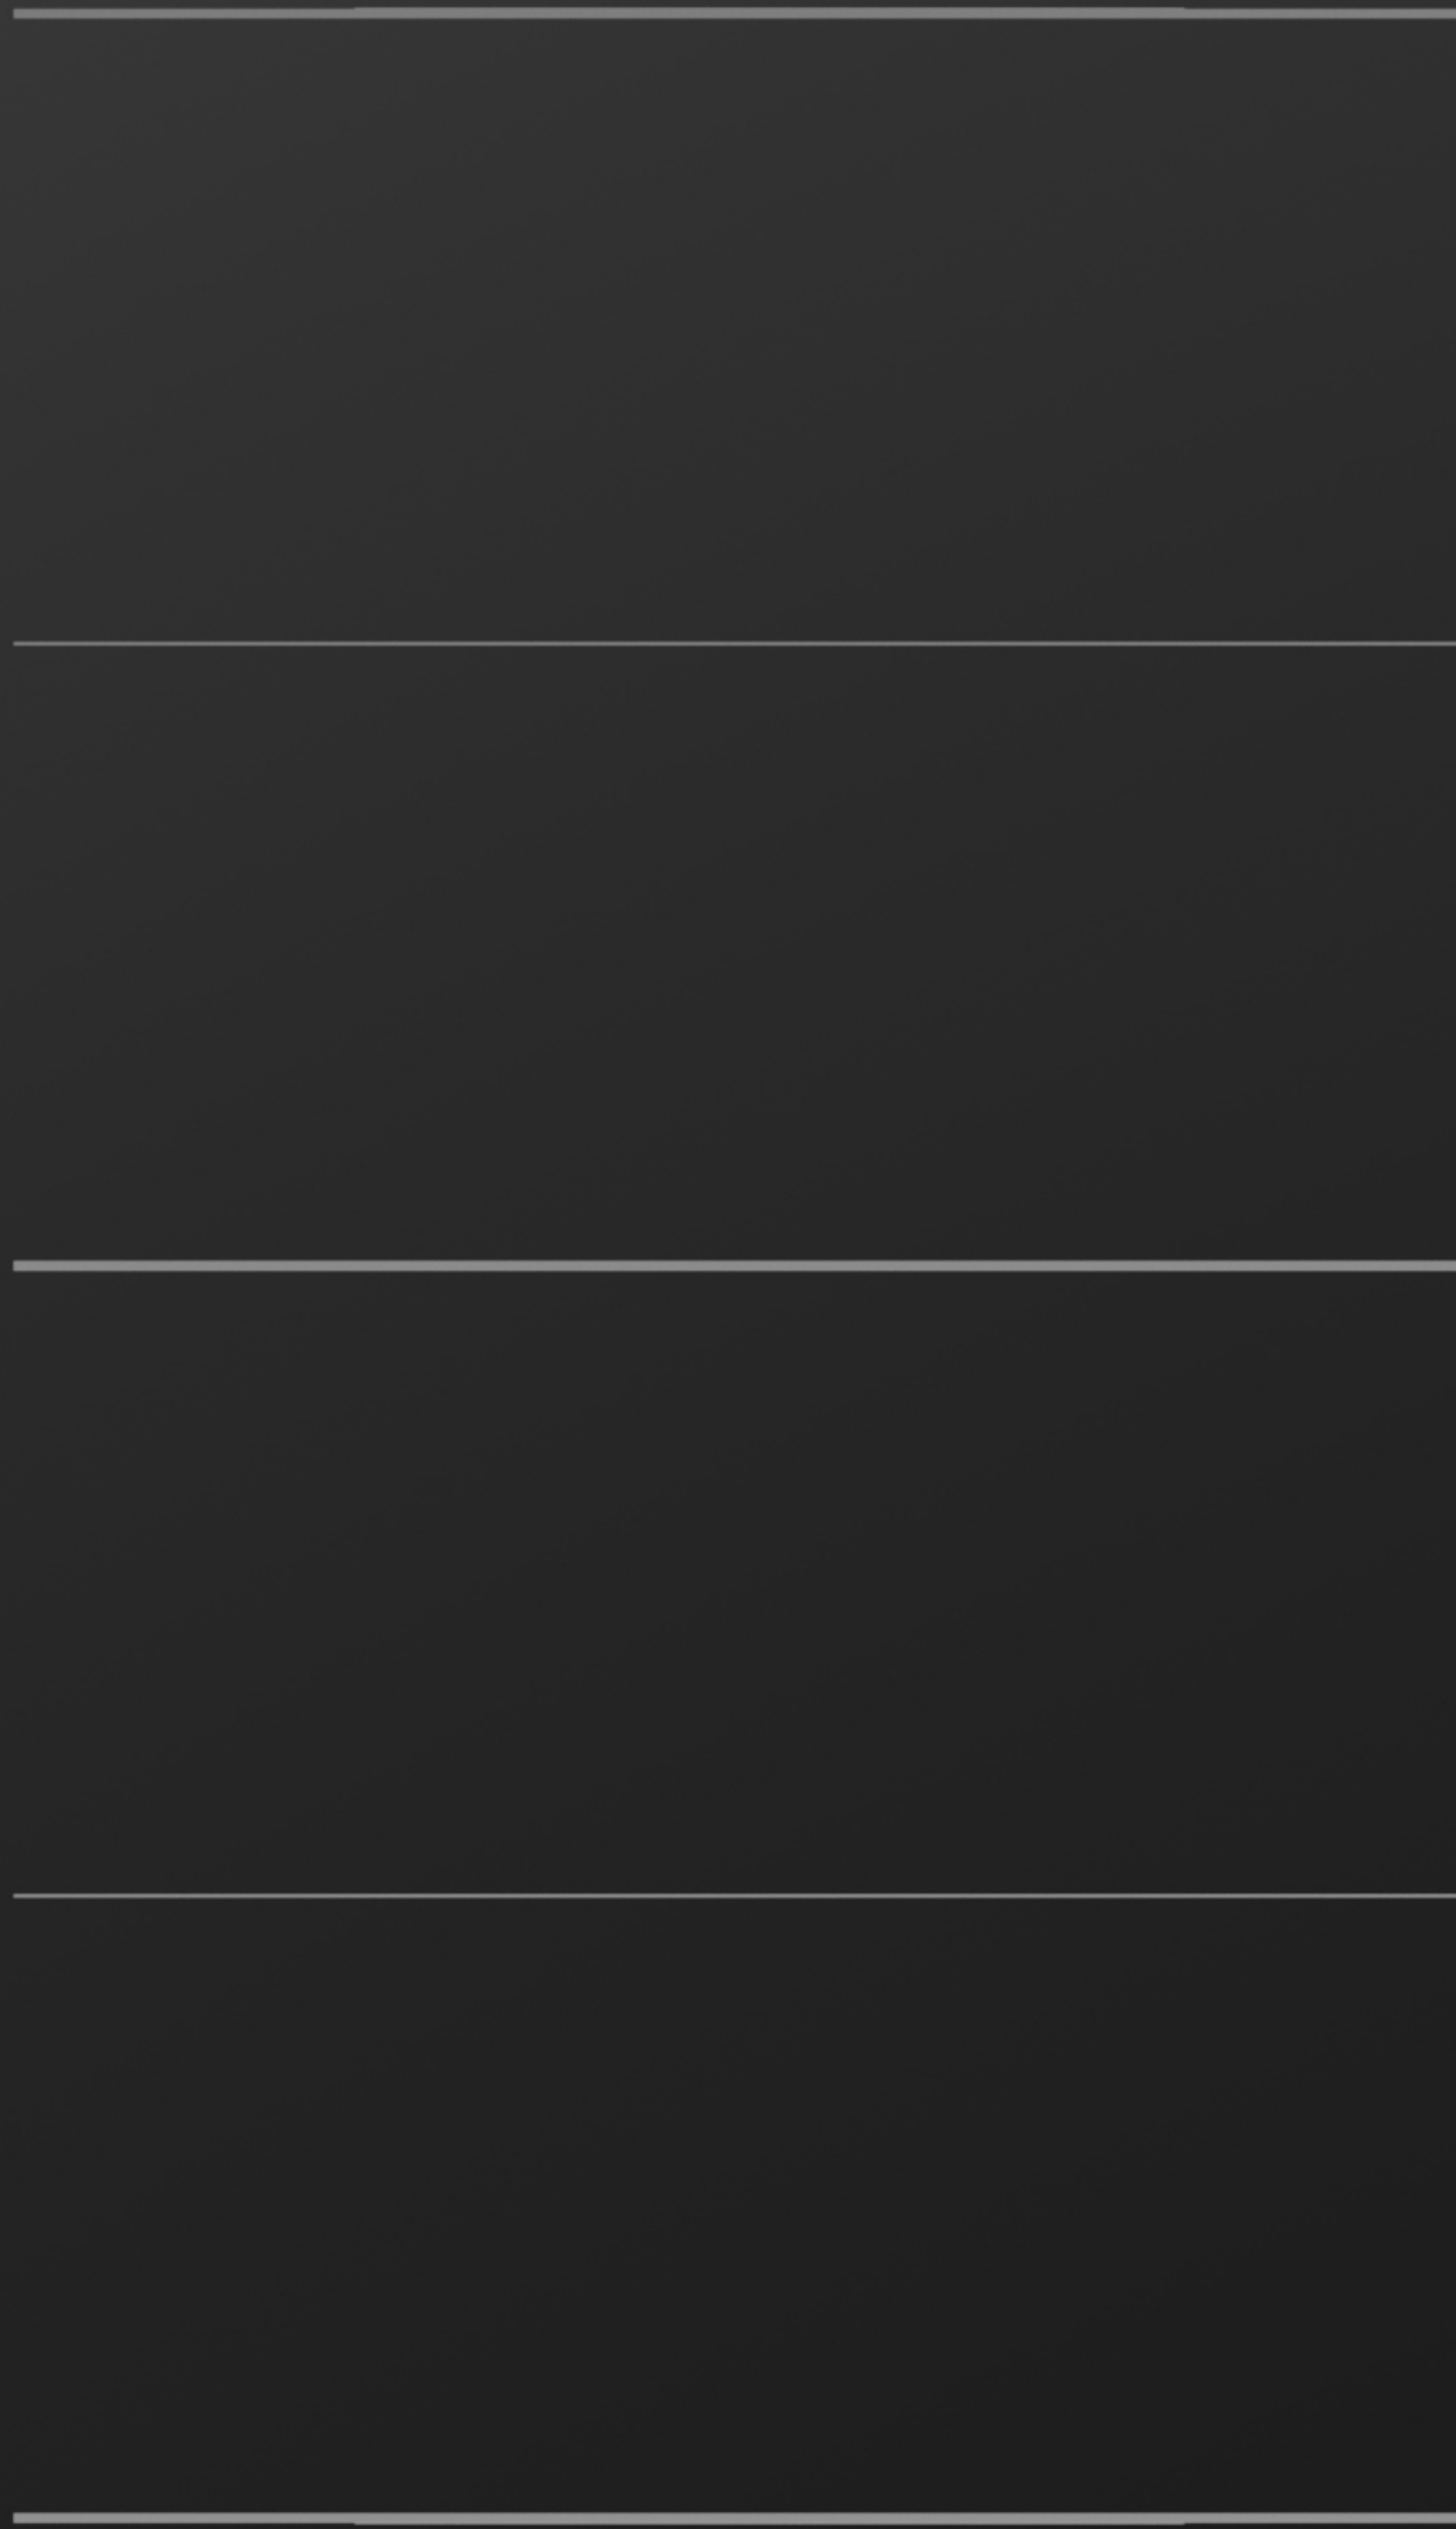

Control panel features a series of red LED indicators and touch-sensitive buttons. From left to right, there are icons for a lock, a pause symbol, a fan speed indicator, and a filter icon. To the right of these icons are three '+' buttons, three '-' buttons, and a power button. Further right are two sets of buttons labeled 'HOOD' and 'FILTER', each with a '+' and '-' button. Below the main row of buttons is a row of ten small indicator lights, followed by a power button and a button labeled '(A)'. The digital display shows '888' for the first three buttons, '8' for the next three, and '8' for the last two.