

**DOOR PARTS**

**CONTROL PANEL PARTS**

**LATCH BOARD PARTS**

**BASE PARTS**

**INTERIOR PARTS**

**OVEN CAVITY PARTS**

13581A

15006A



13552A

 
13213A

14890A

14026A

14970A

13551A

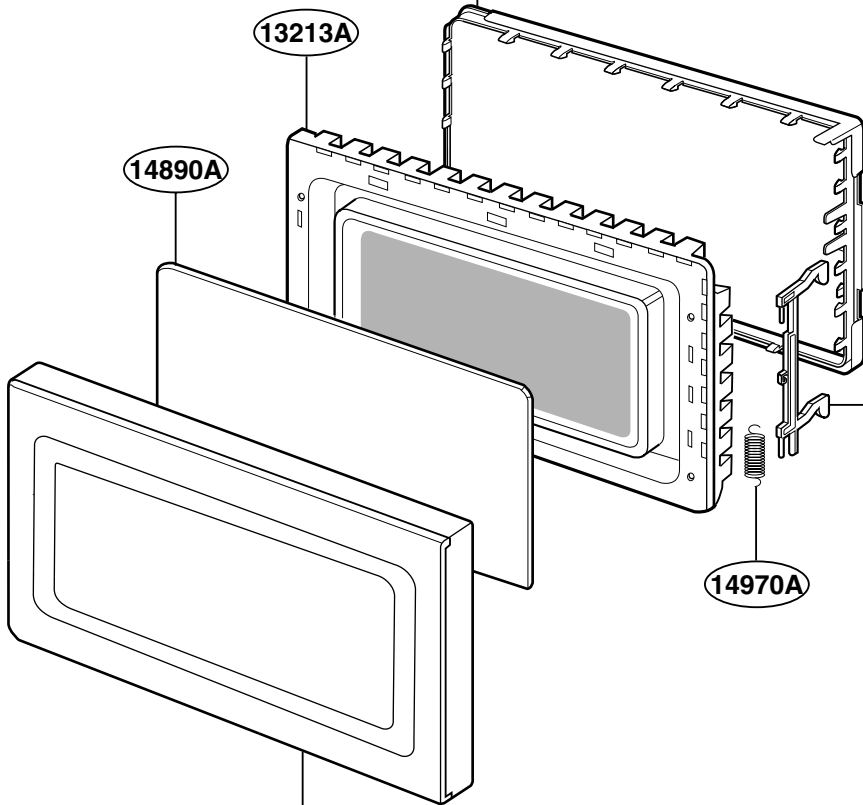

24781S

268711

23550D

23790D

268712

WTP004

WTP018

250201

 
 
 
 
 
 
 
250202

 
24510L

 
24970A

23551A


23551B

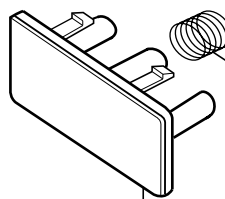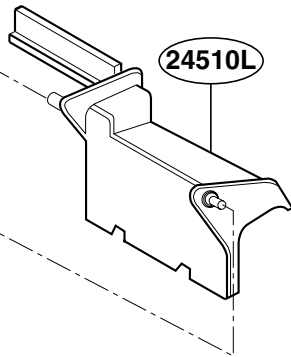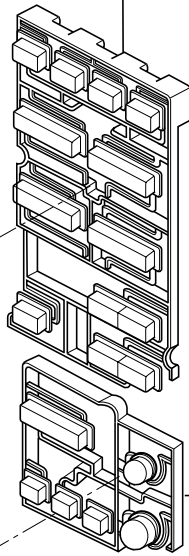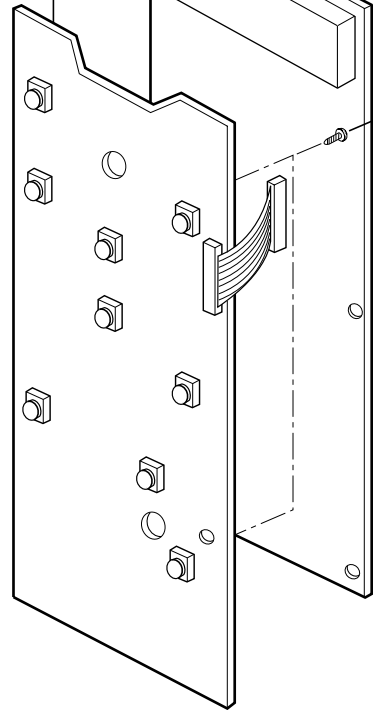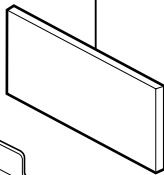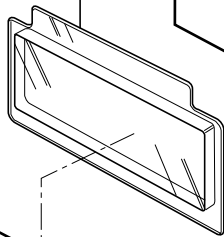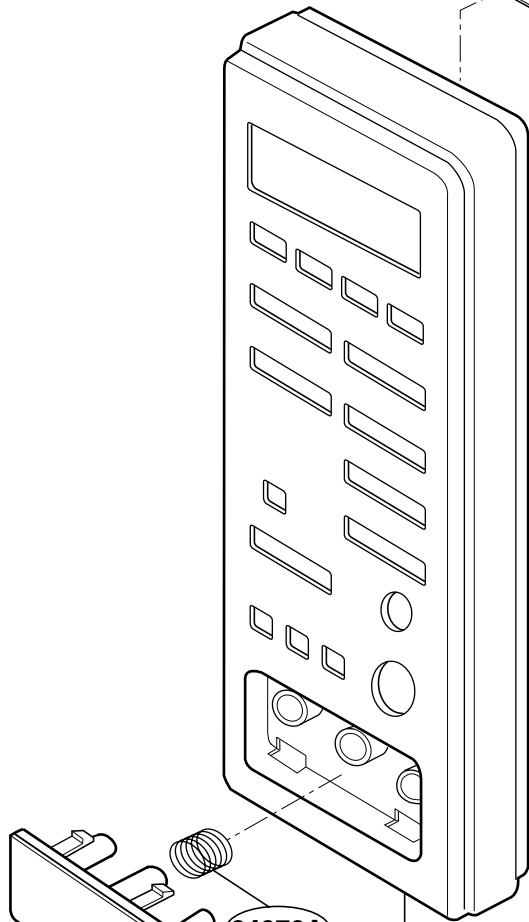

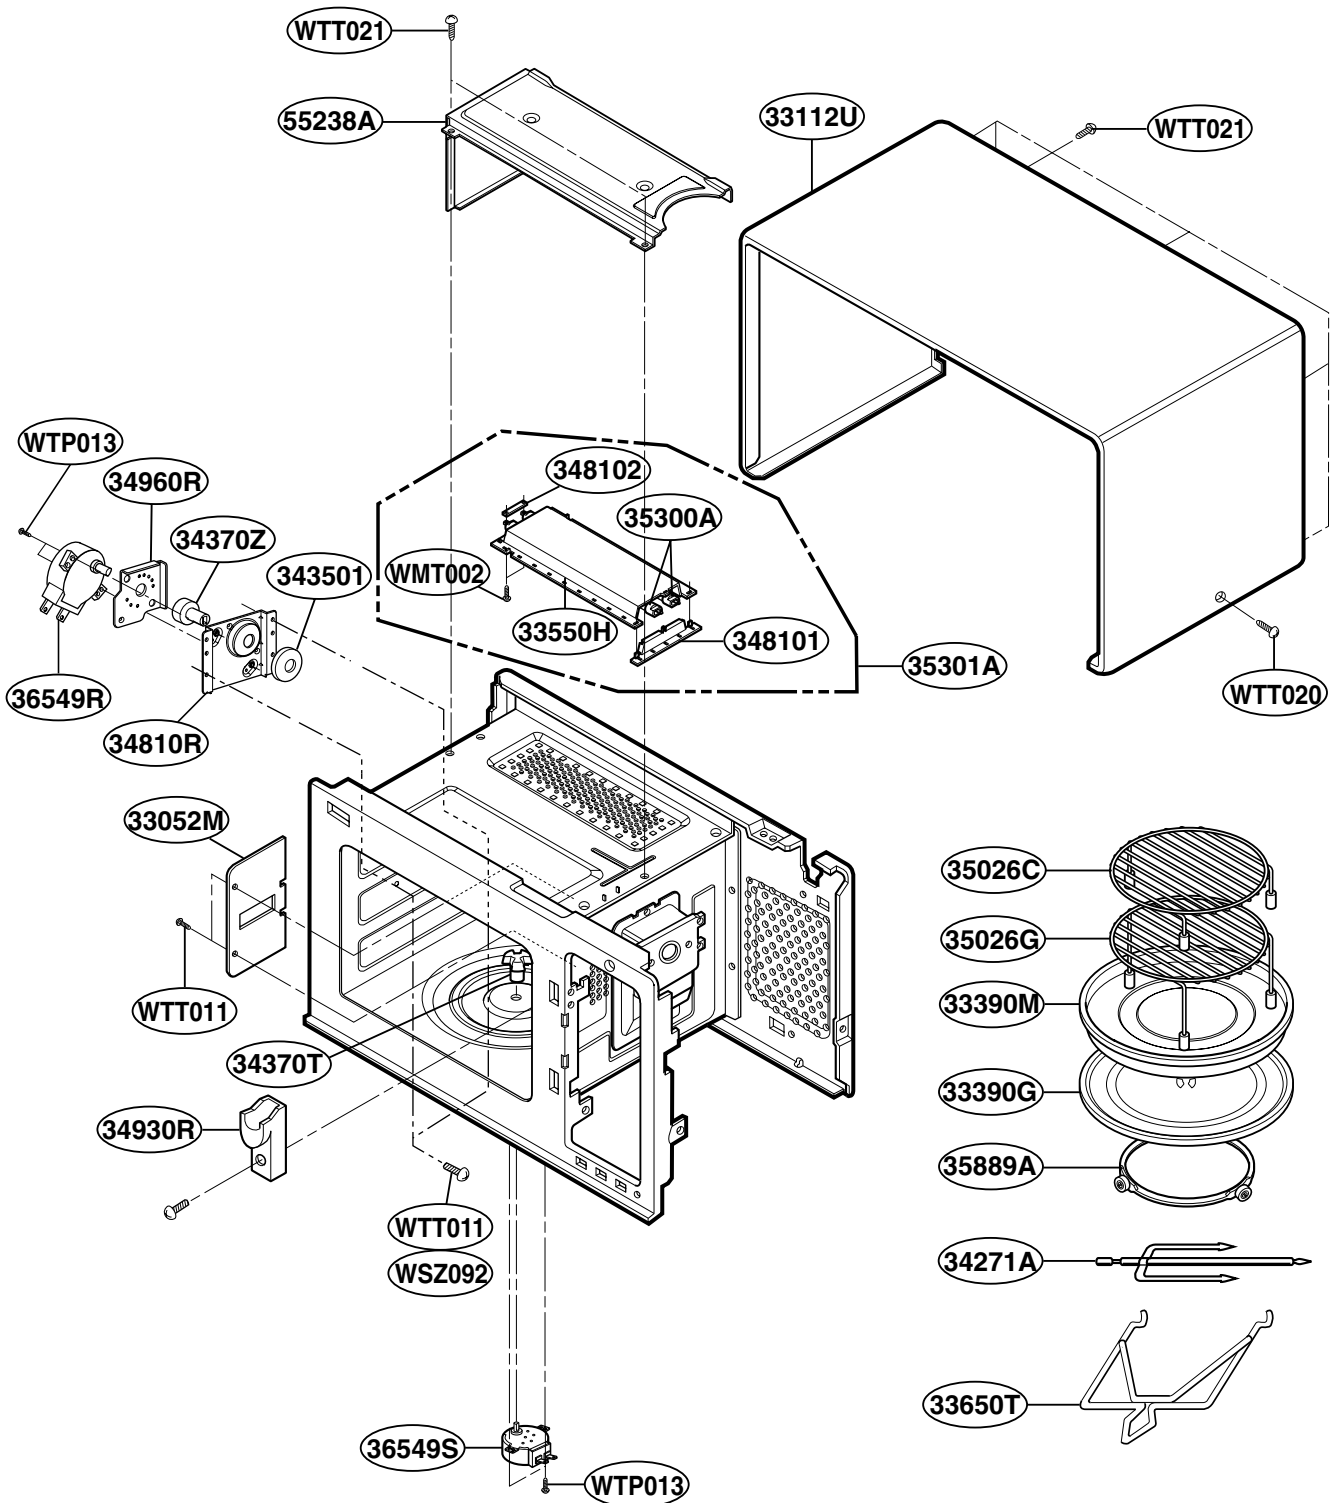

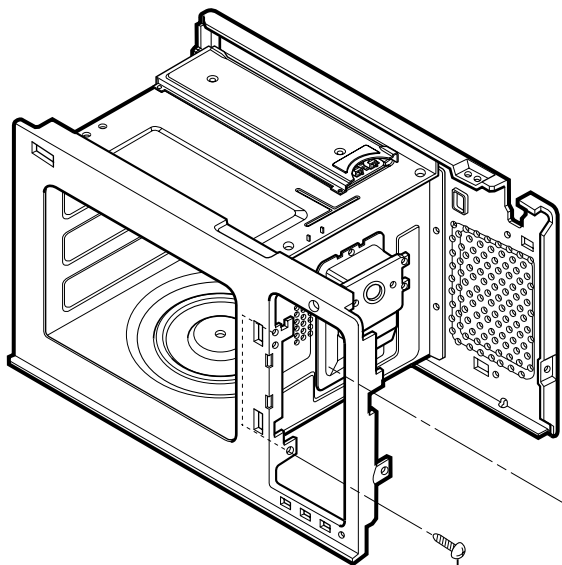

WSZ085

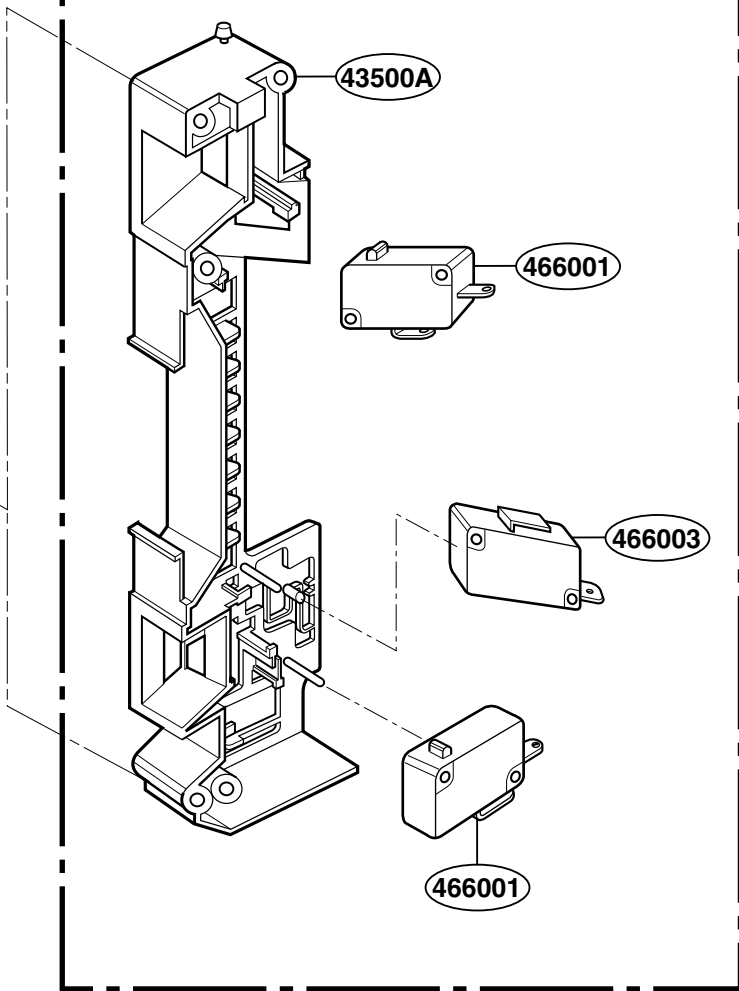 


43500A

466001

466003

466001

 43501A

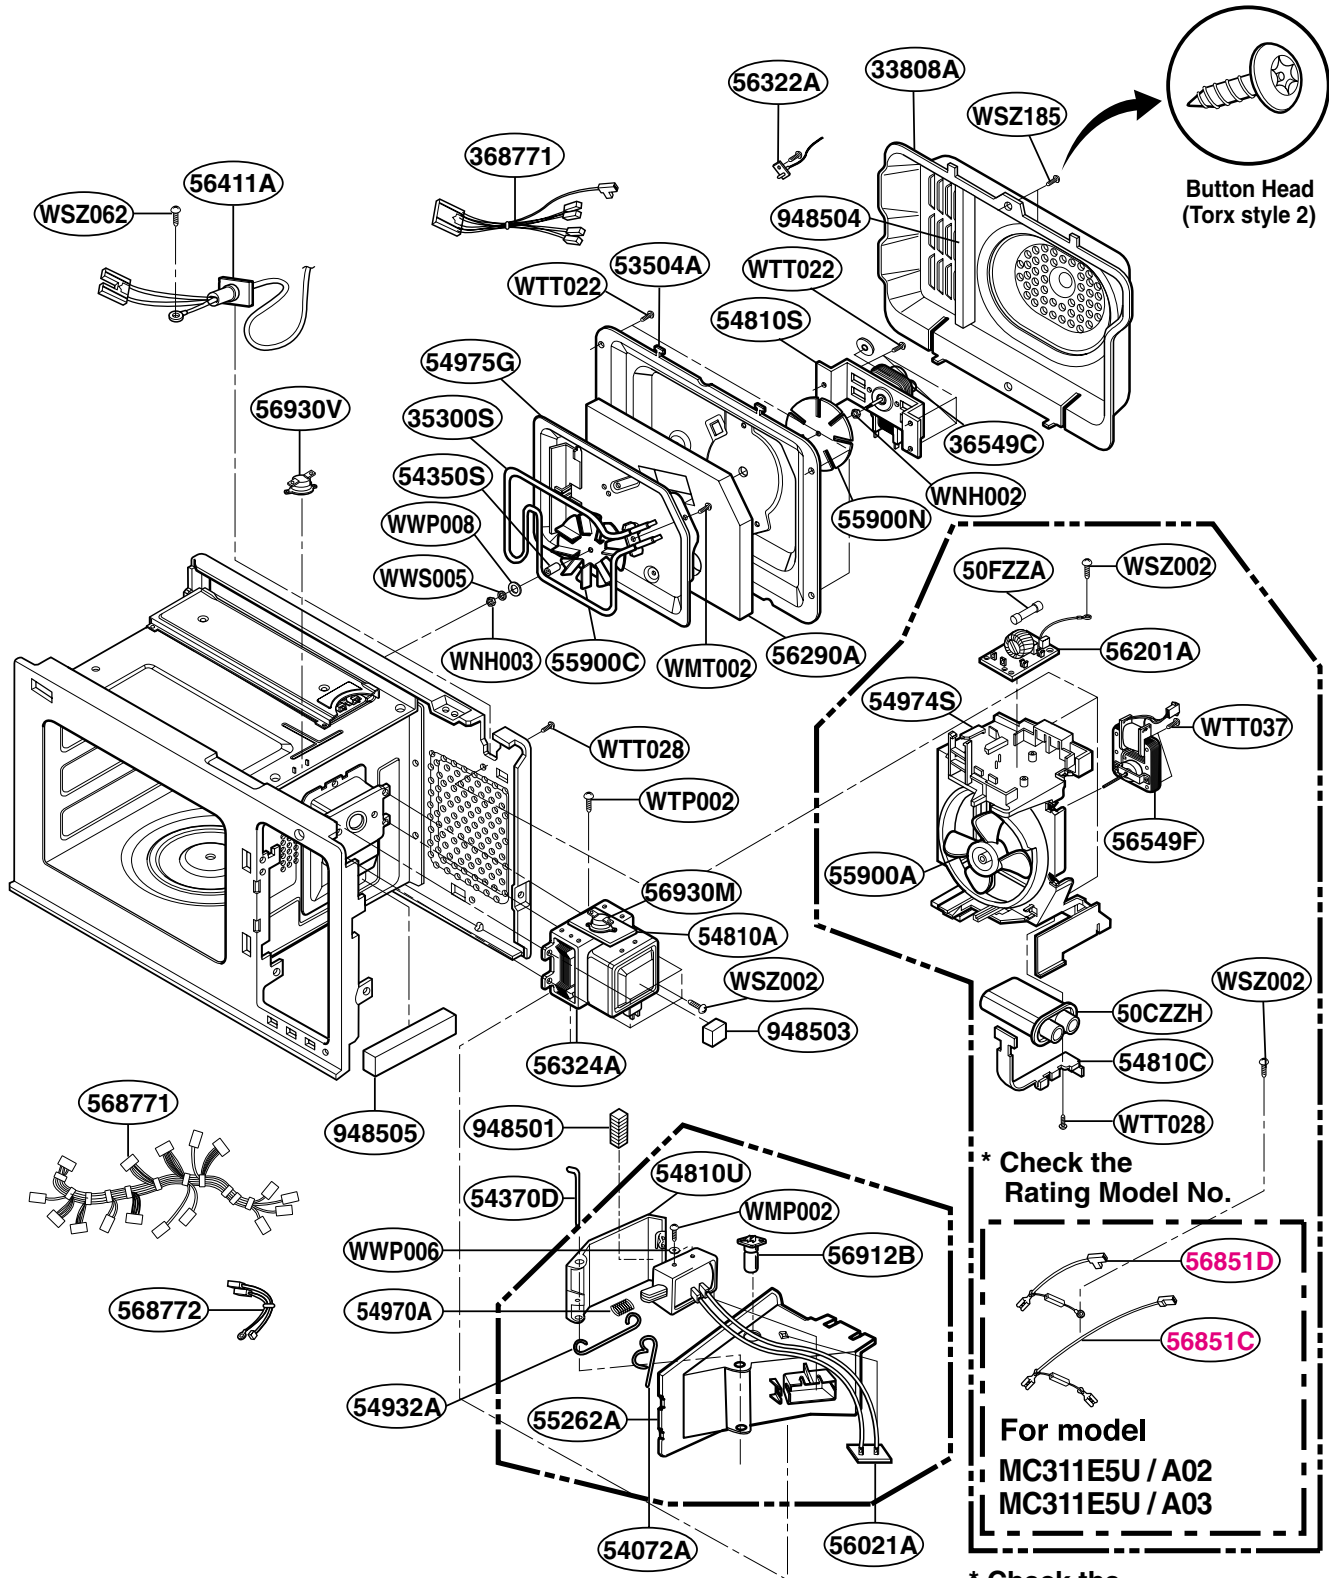

\* Check the Rating Model No.

For model MC311E5U / A02  
MC311E5U / A03

56851D  
56851C

 
\* Check the Rating Model No.

For model MC311E5U / A04

56851C


\* Check the  
Rating Model No.

56170D

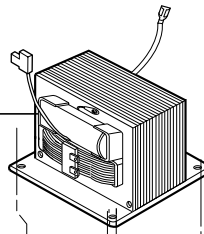

63303A

 63302A

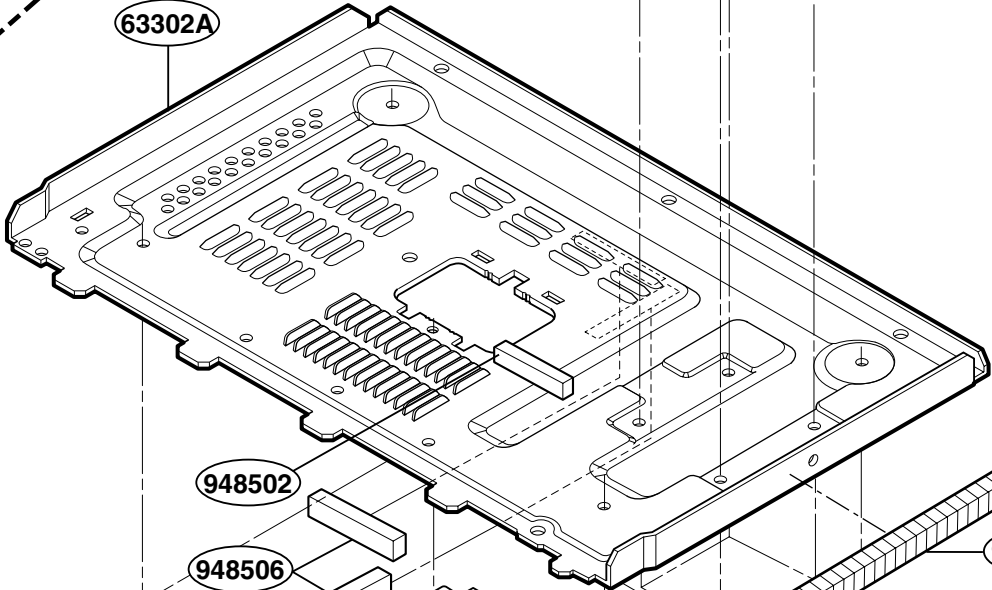

948502

948506

WSZ062

WSZ002

948502

647781

WTT030

