

Error	Problem	Cause or remedy	Process (service technician)
F1	F1 on display.	<ul style="list-style-type: none"> <li>• Temperature sensor in malfunction.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Wiring harness.</li> <li>• Induction coil.</li> <li>• Generator/Module induction.</li> </ul>
F7	F7 on display.	<ul style="list-style-type: none"> <li># The appliance or control module is overheating. Check the in</li> <li>• Appliance installation.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Cooling fan.</li> <li>• Generator/Module induction.</li> </ul>
E6	E6 on display.	<ul style="list-style-type: none"> <li>• Electric supply is in malfunction.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Check electricity.</li> <li>• TC module/user interface.</li> <li>• [blnk]4-037-1529[/blnk].</li> <li>• Power module.</li> <li>• Wiring harness.</li> <li>• Filter module.</li> </ul>
F0	F0 on display.	<ul style="list-style-type: none"> <li>• Temperature sensor of the induction coil is in contact with oth</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections.</li> </ul>
F00	F00 on display.	<ul style="list-style-type: none"> <li># One of the sensors/keys is activated too long (dirt, covered</li> </ul>	
C1	C1 on display.	<ul style="list-style-type: none"> <li>• The appliance is not configured, it has an incorrect configurat</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Configuration.</li> <li>• TC module/user interface.</li> <li>• Generator/Module induction.</li> </ul>
F2	F2 on display.	<ul style="list-style-type: none"> <li>• Generator/Module induction.</li> <li>• Communication error between electronic modules.</li> <li>• Appliance in service mode.</li> </ul>	<ul style="list-style-type: none"> <li>• Connecting clamps.</li> <li>• Generator/Module induction.</li> </ul>
F3	F3 on display.	<ul style="list-style-type: none"> <li>• Generator/Module induction.</li> <li>• Communication error between electronic modules.</li> <li>• Appliance in service mode.</li> </ul>	<ul style="list-style-type: none"> <li>• Connecting clamps.</li> <li>• Generator/Module induction.</li> </ul>
F6	F6 on display.	<ul style="list-style-type: none"> <li>• Temperature sensor in malfunction.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Wiring harness.</li> <li>• Induction coil.</li> <li>• Generator/Module induction.</li> </ul>
F8	F8 on display.	<ul style="list-style-type: none"> <li># The appliance or control module is overheating. Check the in</li> <li>• Appliance installation.</li> <li># Pot is on sensor/key.</li> </ul>	
F08	F08 on display.	<ul style="list-style-type: none"> <li># The appliance or control module is overheating. Check the in</li> <li>• Appliance installation.</li> <li># Pot is on sensor/key.</li> </ul>	
F9	F9 on display.	<ul style="list-style-type: none"> <li>• Incorrect connection of the appliance (interphase).</li> <li>• Repair is carried out by authorized Servis</li> </ul>	<ul style="list-style-type: none"> <li>• Check all connections.</li> </ul>
F10	F10 on display.	<ul style="list-style-type: none"> <li>• User interface in malfunction.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• TC module/user interface.</li> </ul>
F11	F11 on display.	<ul style="list-style-type: none"> <li>• The appliance is not configured, it has an incorrect configurat</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Configuration.</li> <li>• TC module/user interface.</li> <li>• Generator/Module induction.</li> </ul>
F99	F99 on display.	<ul style="list-style-type: none"> <li># One of the sensors/keys is activated too long (dirt, covered</li> </ul>	
FAN	FAN on display.	<ul style="list-style-type: none"> <li>• Cooling fan in malfunction.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Cooling fan.</li> </ul>
FA	FA on display.	<ul style="list-style-type: none"> <li>• Too low voltage(&lt; 180V)</li> </ul>	
Fc	Fc on display.	<ul style="list-style-type: none"> <li>• Communication error between electronic modules.</li> <li>• Repair is carried out by authorized Servis.</li> </ul>	<ul style="list-style-type: none"> <li>• Wiring harness.</li> <li>• TC module/user interface.</li> <li>• Generator/Module induction.</li> </ul>