

Short and precise: everything your dishwasher needs...  
 However, before using the device for the first time, read the Installation and Instruction Manual thoroughly!

# 1 Interesting Facts For The Operation

- Before first use**
- Select the display language (see instruction manual)
  - Fill in salt and rinse aid (see below)
  - Set Softening System (see instruction manual)

The display gives optical character information on the programmes, options, and settings as well as actions available.




- ⏻ Main switch : Switch on the device
- Menu/OK : Select options, store changed value
- and + : Select programmes and settings
- Start : Start programme

The luminous arrows indicate whether you are able to select among other options using - or +.

This dishwasher is equipped with touch buttons. A gentle touch starts the function.

## 2 Fill in salt

Not required if softening system set to "0". Required if "Refill salt" is displayed

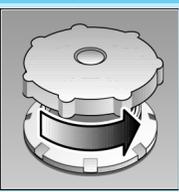


Unscrew the lid.



Only before using the dishwasher for the first time pour approx. 1 l / 1 1/4 pt water into the salt opening.



Pour in max. 1.5 kg / 3 lb 5 oz salt (never detergent!)

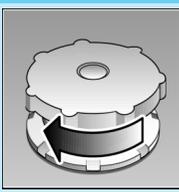

Screw on the lid. Switch on dishwasher immediately.

## 3 Fill in rinse aid


Required if "Refill rinse aid" is displayed.



Press the marking, Lift the lid



Pour in the rinsing agent

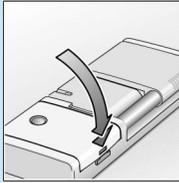

Close the lid. CLICK

## 4 Fill in cleaning product


Little dirt, little cleaning agent



**Warning,**  
combination products are not suitable for all programmes, follow manufacturer's instructions.



Pour in the cleaning agent

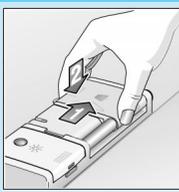

Push the lid too, press. PLOP

## 5 Open mains water tap Switch on the device

Switch on by pressing main switch ⏻ (approx. 2 seconds)

## 6 Select programme In the Main Menu by pressing -/+

Fast, Eco or Power ...



### Programme Overview

The programme data are laboratory read-outs according to European Standard EN 50242. In practice, deviations are possible.

	Auto Super Wash	Auto Wash	Auto Delicate Wash	Quick Wash	Prerinse Only
Duration: hs/mins	1:40-2:20	1:40-2:40	1:20-1:50	0:30	0:19
Energy Consumption: kWh	1,20-1,60	1,00-1,30	0,80-1,10	0,80	0,10
Water Consumption: litres	16-23	12-20	10-17	10	4

## 7 Start programme Here goes ...

Press Start button.

## 8 Switch off the device All done ...

Open the door when the buzzer has sounded 5 times (programme stop). "Ready" is briefly displayed, the appliance automatically switches off after 5 seconds.

### Options/Basic Settings

Select and store: Menu/OK; Set: -/+.


1. Time Pre-select
2. Reduce time
3. Drying level
4. Buzzer volume
5. Amount of rinse aid added
6. Water Hardness
7. Language
8. Standard programmes

### Standard Programmes


	Extra	Eco	Normal	Plus
Duration: hs/mins	2:15	2:20	2:20	2:20
Energy Consumption: kWh	0,65	1,05	1,05	1,05
Water Consumption: litres	19	12	14	15

# Maintenance and care


**Strainers ...**  
Check, if required, clean

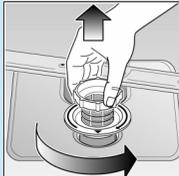

Rotate filter cylinder, remove filter system ...

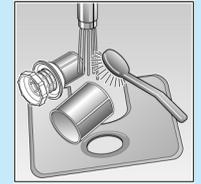

For perfect rinsing results ...  
rinse under flowing water ...

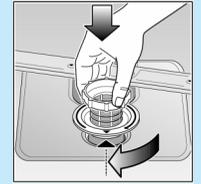

Insert ...




Screw in filter system **NOTE MARK!**


# Cleaning the waste-water pump \*

- \* With some models
- Ladle out water and remove filters
  - Unscrew cover (Torx T20)
  - Check area of fan impeller for foreign objects
  - Screw in cover and insert filters


**Spray arms ...**  
Remove blockages/deposits

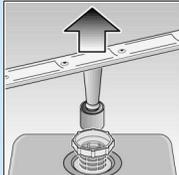


Pull lower arm upwards ...

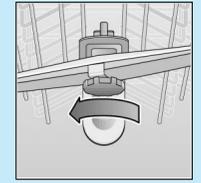


Unscrew upper arm ...

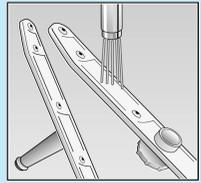

Clean spray nozzles under flowing water (perhaps with toothpick) ...

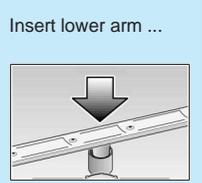

Insert lower arm ...  
Screw in upper arm

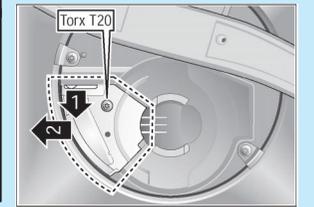

# Eliminating minor faults yourself ...

... Self-help pays!

Fault	Possible Cause	Remedy
Display in wrong language	Language changed	▶ Switch off and on the device. Press the button M/OK repeatedly until the display shows the language selection. Select the language using -/+, and store the selection using M/OK.
Residual water in the device Programme does not start, does not run on	Waste-water pump blocked Programme has not been started Door was opened before end of programme	▶ Clean waste-water pump (see above) ▶ If necessary, start programmes. ▶ Close the door. Wait for programme stop (buzzer sounding 5 times).
Device does not work/stops	Supply fitting not open Supply hose kinked Supply fitting jammed or calcified	▶ Open supply fitting. ▶ Lay supply hose without kinks. ▶ 1. Unscrew water connection. 2. Clean filter in the water connection. 3. Flow rate must be min. 9 l/min when the water inlet is open. If the flow rate is less, replace the supply fitting.
Plastic parts / parts of dishes discoloured	Too little cleaning product Discoloration caused by food colourings (tomato sauce)	▶ Follow manufacturer's specifications (detergent). ▶ Discoloration is quite safe; fades after subsequent rinse cycles.

Fault	Possible Cause	Remedy
Dishes not clean Sand or grainy residues on dishes	Utensils are situated too close to each other or on top of each other Too little cleaning product Unsuitable programme selected Spray nozzles blocked Filters dirty, not installed securely Spray arms blocked	▶ Spread out the utensils, avoid contact between the utensils. ▶ Follow manufacturer's specifications (detergent). ▶ Select more intensive programme. ▶ Clean spray arms (see above). ▶ Clean the strainers (see above). ▶ Arrange the utensils so that the spray arms can rotate freely.
Stains and streaks	Rinse aid dosage too high / too low	▶ Streaks: Reduce dosage. ▶ Water or limescale stains: Increase dosage.
Milky residues on dishes (can be removed)	Water softening system incorrectly set; no special salt	▶ Set water softening system correctly. ▶ Refill with special salt.
Milky film, glasses cloudy / dull (cannot be removed)	Glasses not dishwasher-proof.	▶ Use dishwasher-proof glasses. ▶ Use glass-friendly cleaning products.
Cutlery rusty	Cutlery not rust-proof Hard knife blades are more susceptible Extraneous rust	▶ Use dishwasher-proof cutlery. ▶ Never wash rusting parts in the appliance.

Further advice can be found in the instruction manual

# Interrupting the programme ...

- Open the door.
- To continue the programme, close the door.

# Terminating the programme ...

- Open the door and press the "Terminate programme" button.
- Close the door and wait until the buzzer is emitted 5 times.
- Restart the programme or switch off the appliance.

# Arranging utensils correctly ...

Arrange dishwasher-proof utensils (having removed any ash, wax, grease or ink. Coarsely remove sticky labels, large remnants of jam, milk products or food) according to the operating instructions and check that the spray arms can rotate freely.