


CONTROL PANEL

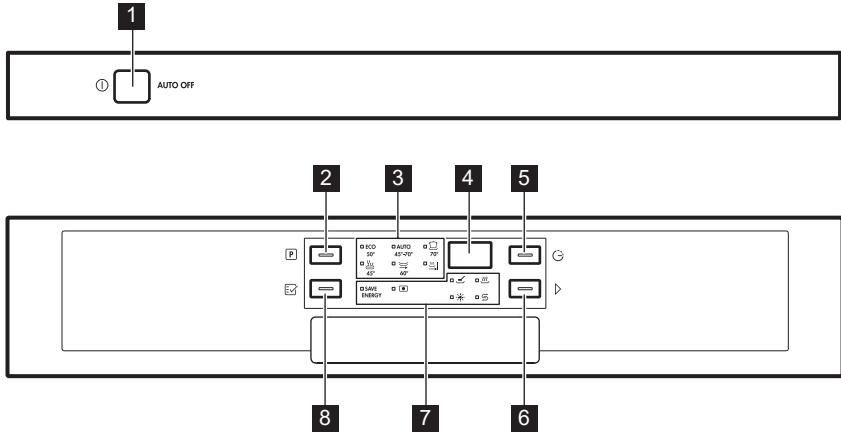

1 On/off button

2 Program button

3 Programme indicators

4 Display

5 Delay button

6 Start button

7 Indicators

8 Option button

Indicators

Indicator	Description
	Washing phase. It comes on when the washing phase operates.
	Drying phase. It comes on when the drying phase operates.
	Multitab indicator.
	Salt indicator. It is always off while the programme operates.
	Rinse aid indicator. It is always off while the programme operates.
	SAVE ENERGY indicator.