


Description

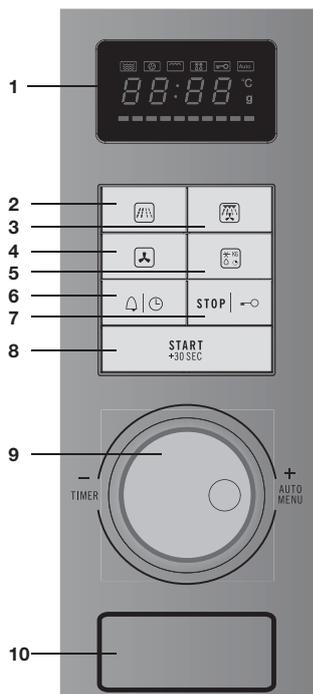

1. Display
2. Microwave button
3. Combination button (grill, microwave, hot air)
4. Oven button (hot air)
5. Defrost button
6. Kitchen timer button/timer button
7. Stop button/Child lock
8. Start button/Quick start/Confirm
9. Setting dial
10. Door release




Operation

Setting the clock



1. Press twice on the timer button. *The hours flash in the display.*
2. Turn the control dial to set the hours. *The set hours appear in the display.*
3. Press the timer button again. *The minutes flash in the display.*
4. Turn the control dial to set the minutes. *The set minutes appear in the display.*
5. Press the timer button again. *The clock is set: the current time appears in the display with a flashing ':'.*

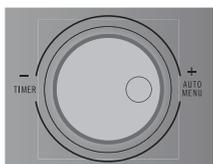

Note

When the appliance is plugged in for the first time, the display shows "0:00". First set the clock.



Using the microwave




1. Press the microwave button to select the microwave function. *P100 appears in the display. The maximum power (900W) is selected. If you wish to select a lower power, press the function button again.*

Power output	Press function button	In display
100% / 900 W	1x	P100
80% / 800 W	2x	P80
50% / 500 W	3x	P50
30% / 300 W	4x	P30
10% / 100 W	5x	P10



2. You can also turn the control dial to select a different power.
3. Press the start button. *The selected power is now confirmed.*
4. Turn the control dial to set the time. *The display indicates the set time.*
5. Press the start button again. *The microwave switches on and the set time counts down in the display. The microwave symbol flashes in the display.*
 - ▷ When the set time has been reached, the current time appears again in the display, and you will hear audio signals.

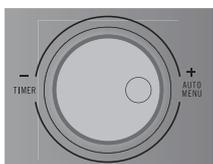

Please note! Not all materials can be used in the combi microwave. Only use suitable cookware.



Fast cooking

1. Press the start button. *You will now cook at 100% microwave power for 30 seconds.*
2. Every next activation of the start button will extend the cooking process by 30 seconds.
The maximum cooking time is 95 minutes.




You can also first turn the control dial to the left to set a time. Then press the start button and the microwave will switch on on full power for the set amount of time.




Using the grill

1. Press the combi button once.
'G-1' appears in the display.
 - Press again (a number of times) on the combi button if you wish to select a different function.
 - You can use the control dial to select another function by turning the dial.
2. Press the start button.
The selected function is now confirmed.
3. Turn the control dial to set the time. *The display indicates the set time.*
4. Press the start button again. *The microwave switches on and the set time counts down in the display.*
The grill symbol flashes in the display.
 - Half-way through the grill time a double-beep signal sounds to indicate that the dish needs to be turned over. Open the door, turn the dish over, close the door and press the start button.
 - When the set time has been reached, the current time appears again in the display, and you will hear 5 beeps.

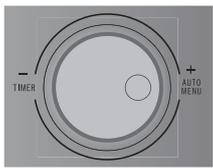

Hot air cooking

1. Press the oven button. *'140' flashes in the display.*
2. Press again (a number of times) on the oven button if you wish to set a different temperature.
You can set a temperature from 140 °C to 230 °C.
 - You can use the control dial to select temperature by turning the dial.
3. Press the start button. *The selected temperature is now confirmed.*
4. Turn the control dial to set the time (maximum 95 minutes).
The display indicates the set time.
 - The time can only be set once the pre-heat is ready and the door has been opened and closed again.
 - If no time is set within 5 minutes after pre-heating, the pre-heating stops and 5 beeps sound.
The microwave switches off.
5. Press the start button again.
The microwave switches on and the set time counts down in the display.
The oven symbol flashes in the display.
 - When the set time has been reached, the current time appears again in the display, and you will hear 5 beeps.

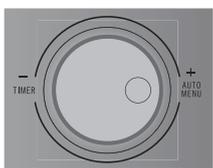

Child lock

With the child lock you can lock the control panel to prevent unintended use of the oven.

activating the child lock

1. Press the stop button for 3 seconds.
You hear a beep. The 'lock' symbol appears in the display.

deactivating the child lock

1. Press the stop button for 3 seconds.
You hear a beep. The 'lock' symbol disappears from the display.



See the full manual for additional user information about use, maintenance and breakdowns.