Error	Problem	Cause or remedy	Process (service technician)
F0	F0 on display.	User interface in malfunction. Repair is carried out by authorized Servis.	Control module.
F1	F1 on display.	Touch sensor error on the control module. Hone of the sensors/keys is activated too long (dirt, covered Repair is carried out by authorized Servis.	Control module. See service manual (depends on model)[blnk]4-037-1841[/bl
F2	F2 on display.	Too high temperature on the control module. Excessive cooking zone temperature or overheating of the in # Wait for appliance too cool down. Check the installation of the appliance or remove the hot pot	Cooling fan. See service manual (depends on model)[blnk]4-037-1841[/bl
F3	F3 on display.	# Inappropriate pot.	Generator/Module induction. See service manual (depends on model)[blnk]4-037-1841[/bl
F4	F4 on display.	The appliance is not configured, it has an incorrect configurat Repair is carried out by authorized Servis.	Configure the existing control module. See service manual (depends on model)[blnk]4-037-1841[/bl
F5	F5 on display.	Communication error between electronic modules. # Check that the appliance is connected to the mains in accor	See service manual (depends on model)[blnk]4-037-1841[/bl Connection cable. Generator/Module induction. Control module.
F6	F6 on display.	# Check that the appliance is connected to the mains in accor	Generator/Module induction.
F8	F8 on display.	Cooling fan in malfunction. Repair is carried out by authorized Servis.	Cooling fan. Generator/Module induction. See service manual (depends on model)[blnk]4-037-1841[/bl
F9	F9 on display.	Temperature sensor in malfunction. Repair is carried out by authorized Servis.	See service manual (depends on model)[blnk]4-037-1841[/bl
FA	FA on display.	Internal error of the induction module. Repair is carried out by authorized Servis.	Generator/Module induction.
FH	FH on display.	Excessive cooking zone temperature or overheating of the in # Empty pot is on cooktop. # Wait for appliance too cool down. # Value of the interpretation of the interpretat	See service manual (depends on model)[blnk]4-037-1841[/bl