

| Error | Problem | Cause or remedy | Process (service technician) |
|---------|-------------------------------|--|--|
| Er03/] | Er03/] | # Pot is on sensor/key. # Dirt is on the user interface. | |
| Er20 | Er20 on display. | • User interface in malfunction. • Repair is carried out by authorized Servis. | • TC module/user interface. |
| Er22 | Er22 on display. | • User interface in malfunction. • Repair is carried out by authorized Servis. | •TC module/user interface. |
| E2 | E2 on display. | # The appliance or control module is overheating. Check the in • Appliance installation. # Empty pot is on cooktop. | |
| E3 | E3 on display. | # Inappropriate pot. | |
| E5 | E5 on display. | • Communication error between electronic modules. • Appliance in service mode. | •Connecting clamps. •Generator/Module induction. |
| E6 | E6 on display. | • Electric supply is in malfunction. • Repair is carried out by authorized Servis. | •Connecting clamps. •Generator/Module induction. •Wiring harness. •Filter module. |
| E7 | E7 on display. | • Repair is carried out by authorized Servis. | •TC module/user interface. •Generator/Module induction. |
| E8 | E8 on display. | • Repair is carried out by authorized Servis. | •Cooling fan. •Generator/Module induction. |
| E9 | E9 on display. | •Temperature sensor in malfunction. • Repair is carried out by authorized Servis. | •Connecting clamps. •Generator/Module induction. |
| EA | EA on display. | • Electric supply is in malfunction. • Repair is carried out by authorized Servis. | •Connecting clamps. •Generator/Module induction. |
| EH | H on display. | # Hot cooking zone | |
| E/Flash | E blinking on screen/display. | • Configuration will be deleted. • Repair is carried out by authorized Servis. | • [blnk]4-037-1311[/blnk]. •TC module/user interface. |
| C/Flash | C blinking on screen/display. | • The appliance is not configured, it has an incorrect configurat • Appliance in service mode. • Repair is carried out by authorized Servis. | • [blnk]4-037-1311[/blnk]. •TC module/user interface. |
| c | c on display. | • The appliance is not configured, it has an incorrect configurat • Appliance in service mode. • Repair is carried out by authorized Servis. | • [blnk]4-037-1311[/blnk]. •TC module/user interface. |
| - | - on display. | • The appliance is not configured, it has an incorrect configurat • Appliance in service mode. • Repair is carried out by authorized Servis. | • [blnk]4-037-1311[/blnk]. •TC module/user interface. |
| E4 | E4 on display. | • The appliance is not configured, it has an incorrect configurat • Repair is carried out by authorized Servis. | •TC module/user interface. • [blnk]4-037-1311[/blnk]. |
| EC | EC on display. | • The appliance is not configured, it has an incorrect configurat • Repair is carried out by authorized Servis. | •TC module/user interface. • [blnk]4-037-1311[/blnk]. |