

Error	Problem	Cause or remedy	Process (service technician)
Buzzer	Continuous tone buzzer.	<ul style="list-style-type: none"> • Open door alarm. • The alarm is canceled by closing the door or by pressing the • The alarm is automatically canceled after 10 [min]. • In standby mode alarm does not work. 	<ul style="list-style-type: none"> •Supply cord and connector. •Magnet on/in the door. •Door switch.
Buzzer/ Flash	<ul style="list-style-type: none"> • Flashing alarm symbol. • Intermittent audible sound for 5 [min] at the beginning of eac 	<ul style="list-style-type: none"> • High temperature alarm. • Too frequent opening of the door, or door open too long. • Door not closed correctly (possible impurities on door). • There was no electricity for a longer period. • There is too much foodstuffs in the appliance. <p># Press the bell symbol and check the food. Flashing remains</p>	<ul style="list-style-type: none"> •Supply cord and connector. •Door switch. •Temperature sensor. •Thermal fuse (option). •Defrosting heater (option). •Connecting clamps. •compressor. •The operation of cooling system elements (leakage).
Flashing	Flashing all LED-s.	<ul style="list-style-type: none"> • The appliance continues to function, the basic function is gua • Failure of temperature sensor in refrigerator compartment. • Repair is carried out by authorized Servis. 	<ul style="list-style-type: none"> •Supply cord and connector. •Temperature sensor in the cooling compartment.