

Error code	Fault	Fault description	Process (client)	Process (service technician)
E0	E0 on display	Processor fault, damaged processor.	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Disconnect the appliance from the mains</li> <li>• Replace control module.</li> </ul>
E1	E1 on display	Faulty operation of the temperature sensor. Temperature sensor with open terminals / short circuit. An error occurs if the connection to the temperature sensor is interrupted or short-circuited. The program is immediately terminated..	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check the NTC sensor.</li> <li>• Check the connectors.</li> <li>• Check cables.</li> </ul>
E2	E2 on display	Communication error between control unit and user interface control	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check communication cable (unplugged, damaged)</li> <li>• Check the connectors.</li> <li>• Check user interface, control unit.</li> </ul>
E3	E3 on display	Pumping error. An error occurs when the device detects the full container in five consecutive times, in which container was discharged. Drying is interrupted.	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check the pump.</li> <li>• Check the float.</li> <li>• Check the tubes.</li> </ul>
E4	E4 on display	Clogged filter, blocked air flow (just for dryers with heat pumps). An error occurs if permitted temperature of heat pump is exceeded.	Inform the customer.	<ul style="list-style-type: none"> <li>• Cleaning the filters..</li> <li>• Check the NTC sensor.</li> </ul>
E5	E5 on display	Clogged filter, blocked air flow.. An error occurs if max. program time is exceeded ( shown only in service menu).	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Cleaning the filters..</li> <li>• Check the heater.</li> <li>• Check heat pump.</li> </ul>
E6	E6 on display	Error safety class B. Control unit error (relay in fault).	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check the control unit.</li> <li>• Check relay.</li> </ul>
E7	E7 on display	Error safety class B. Control unit error. Door controlling in fault	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check the control unit.</li> </ul>
E8	E8 on display	Error safety class B. Control unit error. Button fault.	Repair by a service technician.	<ul style="list-style-type: none"> <li>• Check the control unit.</li> <li>• Check buttons.</li> </ul>