
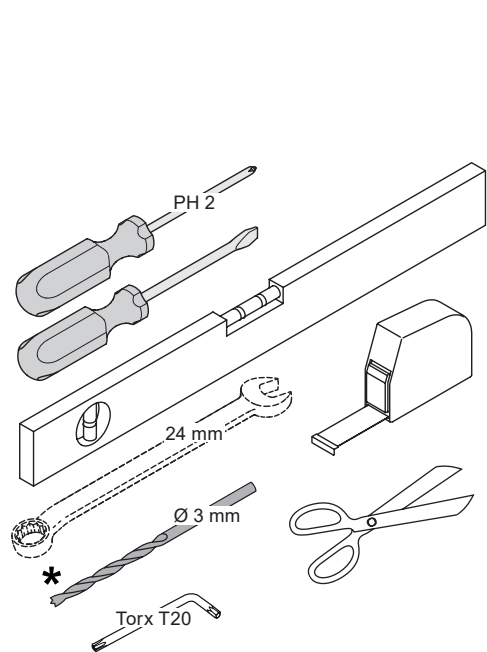
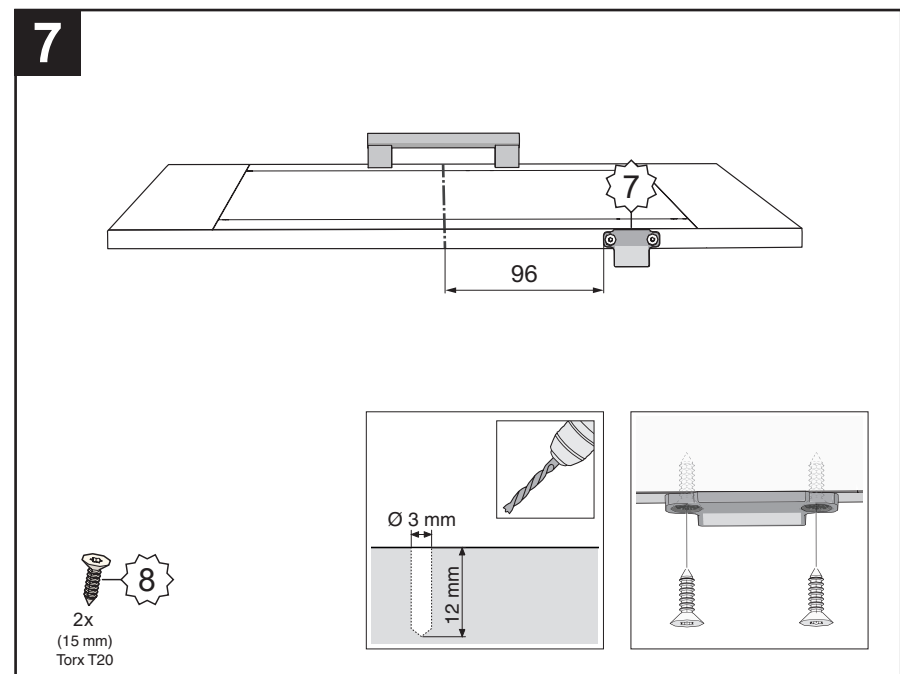
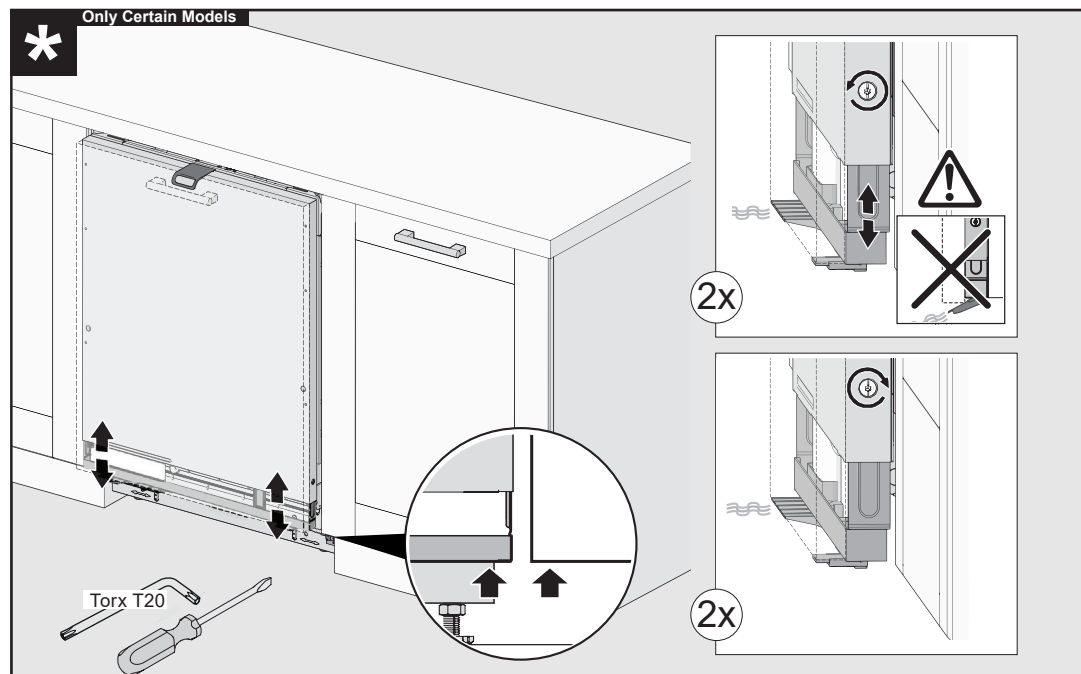
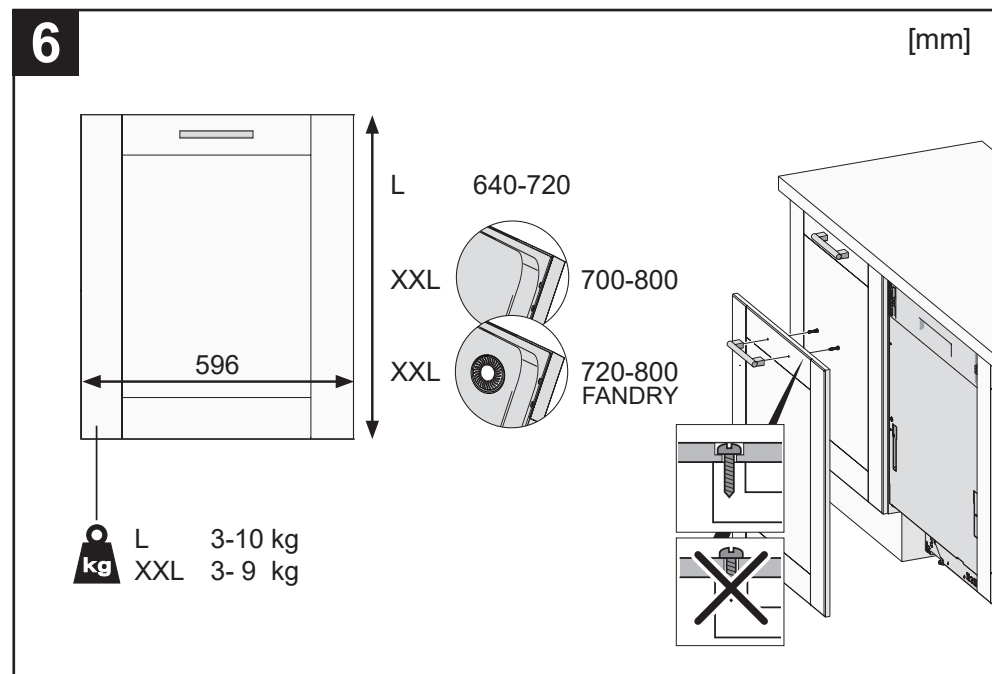
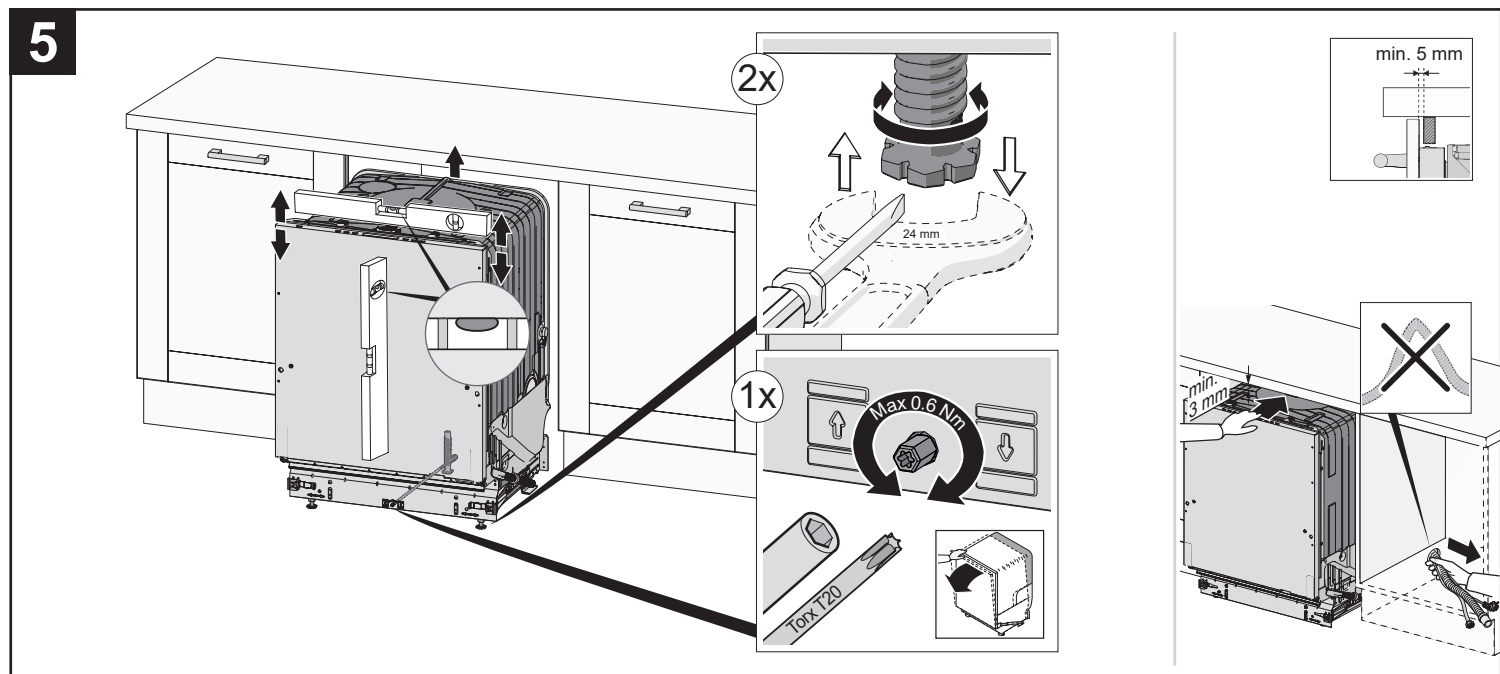
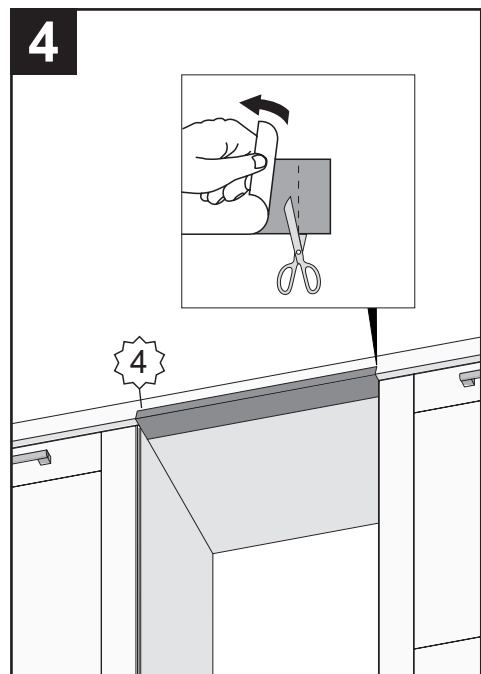
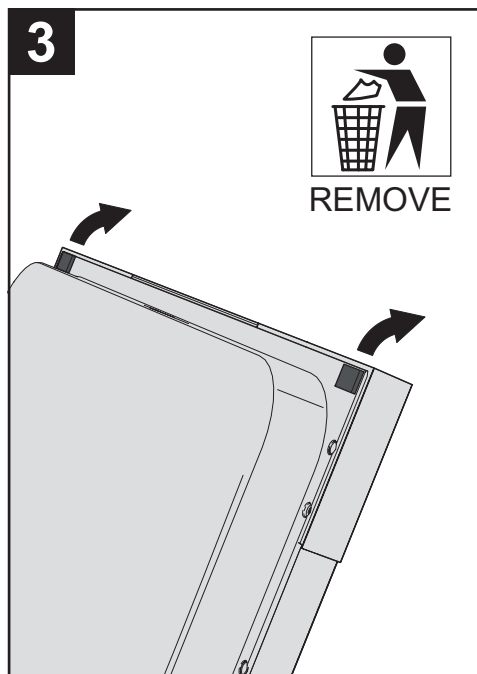
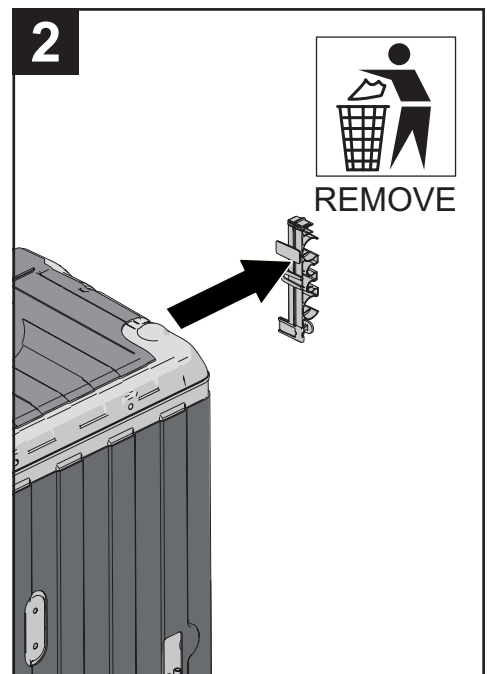


*** EN** Only certain models.
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR	في موديلات معينة.	IT	Solo per alcuni modelli.	RO	Numai la anumite modele.
BG	Само определени модели.	KK	Тек белгилі бір модельдер.	RU	Только в некоторых моделях.
CZ	Pouze některé modely.	MK	Само кај одредени модели.	SK	Iba niektoré modely.
CN	仅限部分型号。	LT	Tik tam tikri modeliai.	SL	Samo nekateri modeli.
DA	Kun visse modeller.	LV	Vienīgi noteiktiem modeļiem.	SQ	Vetëm disa modele të caktuara.
DE	Nur bei bestimmten Modellen.	NL	Alleen bepaalde modellen.	SR	Samo neki modeli.
ES	Sólo se aplica a determinados modelos.	NO	Bare enkelte modeller.	SV	Endast vissa modeller.
ET	Ainult teatud mudelitel.	PL	Dotyczy tylko wybranych modeli.	UK	Тільки в деяких моделях.
FA	فقط بعضی از مدل ها.				
FI	Vain tietyt mallit.				
FR	Uniquement pour certains modèles.				
HR	Samo na nekim modelima.				
HU	Csak bizonyos modellek esetében.				

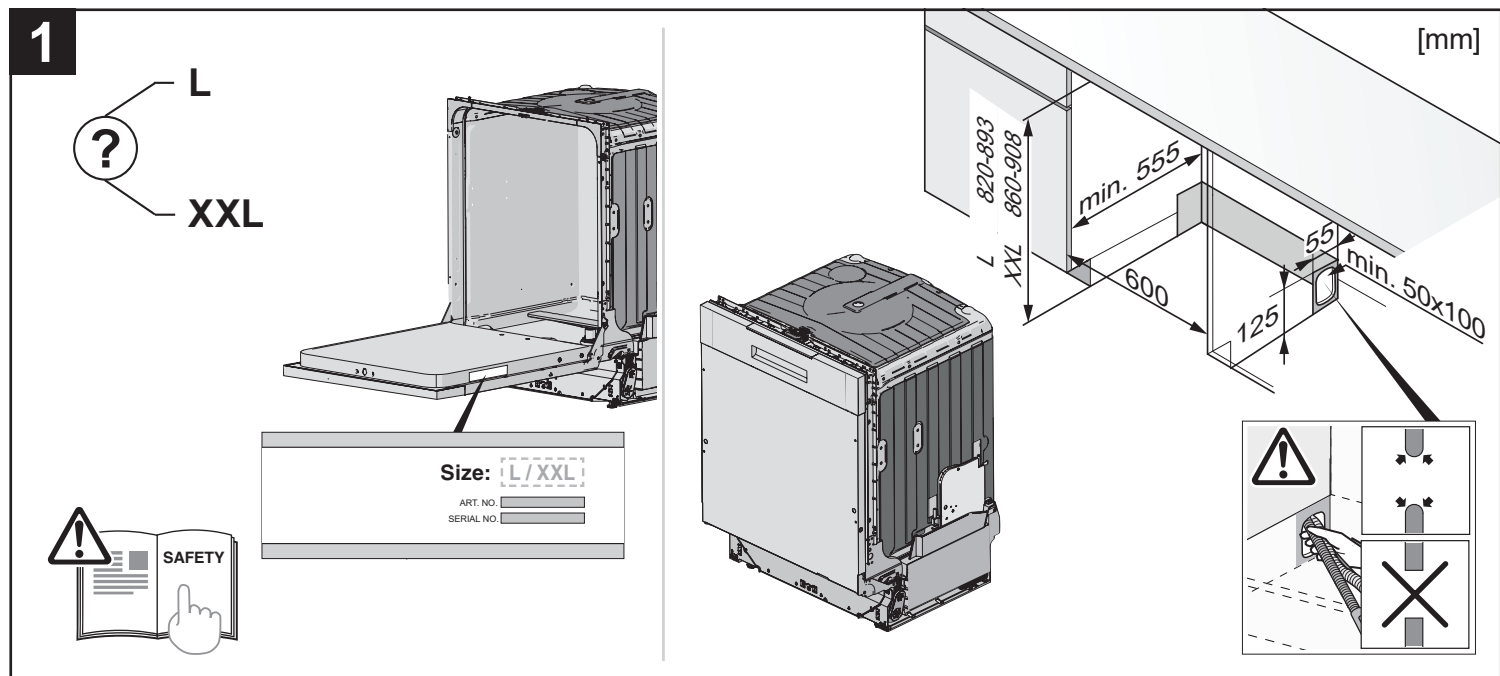

895619-01

We reserve the right to make changes.

