




PAN SUPPORTS (OPTIONAL)

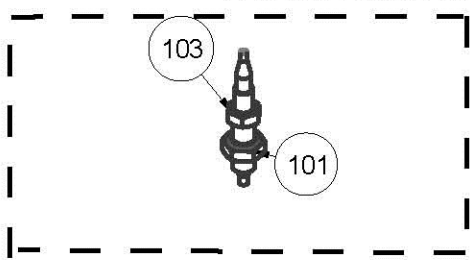


THERMOCOUPLE (OPTIONAL)

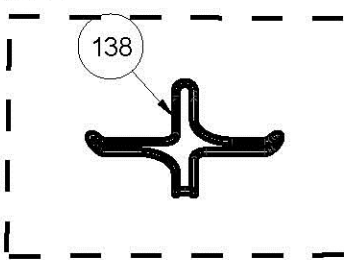


ETHNIC COFFEEPOT SUPPORT (OPTIONAL)

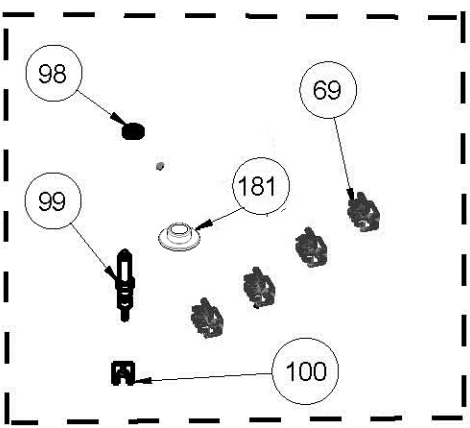


MICRO SWITCH (OPTIONAL)

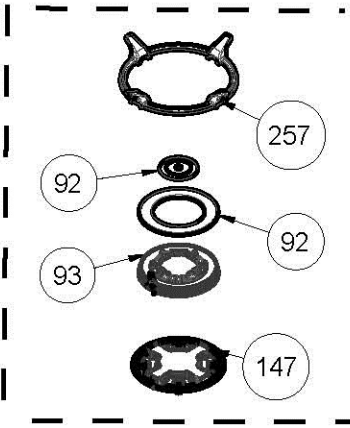


WOK BURNER (OPTIONAL)

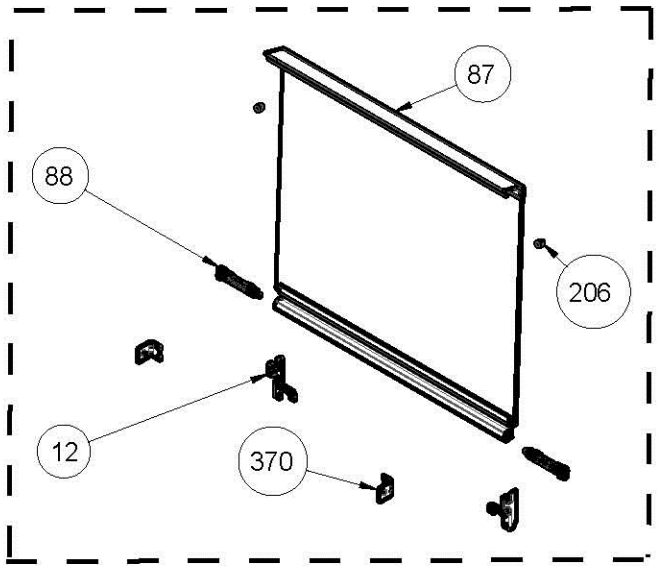


GLASS LID OPTIONAL (AVAILABLE ONLY FOR FRAMED HOBS)

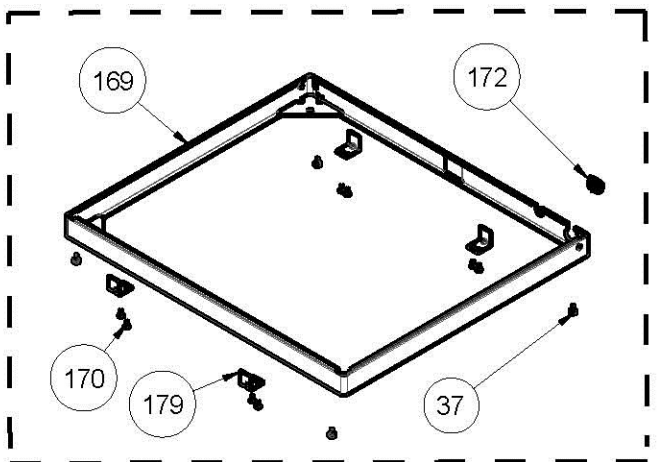


COOKTOP FRAME (ONLY FOR TABLE-TOP HOBS)

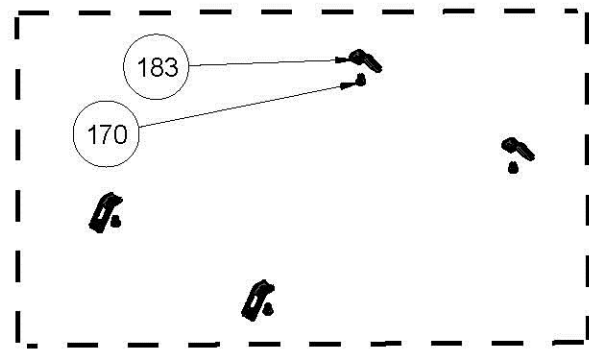

ASSEMBLY BRACKET (ONLY FOR BUILT-IN HOBS)

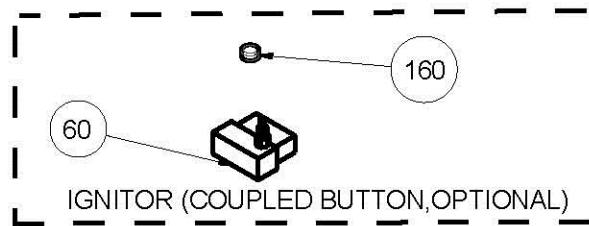

IGNITOR (COUPLED BUTTON, OPTIONAL)

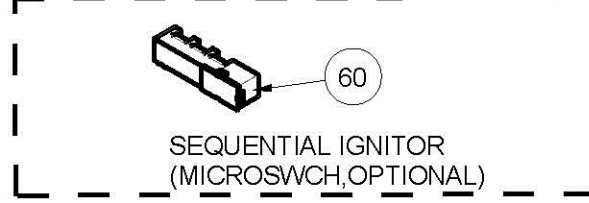

SEQUENTIAL IGNITOR (MICROSWCH, OPTIONAL)

GAS HOBS IGNITION SYSTEMS