

LEFT

95

96

RIGHT

92

93

76

167

98

101

99

100

109

147

246

64

63

71

69

505

66

83

84

365

92

93

86

102

98

101

99

100

109

147

58

168

71

60

30

 
 
 
 
31

 
SEMI-RAPID BURNER

RAPID BURNER


AUXILIARY BURNER

SEMI-RAPID BURNER

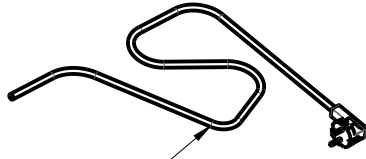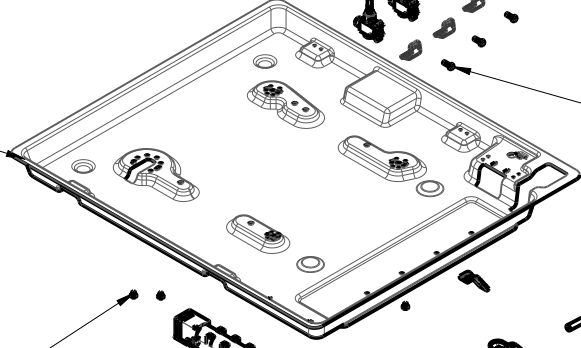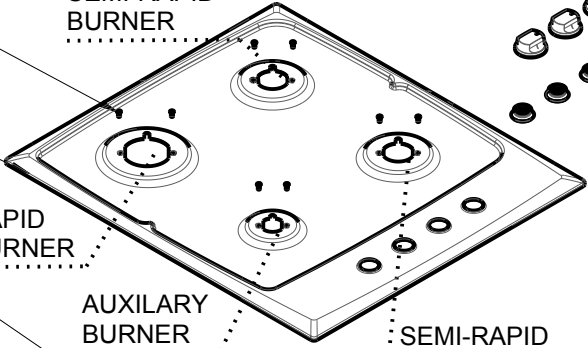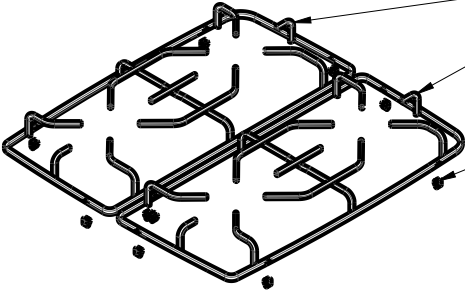


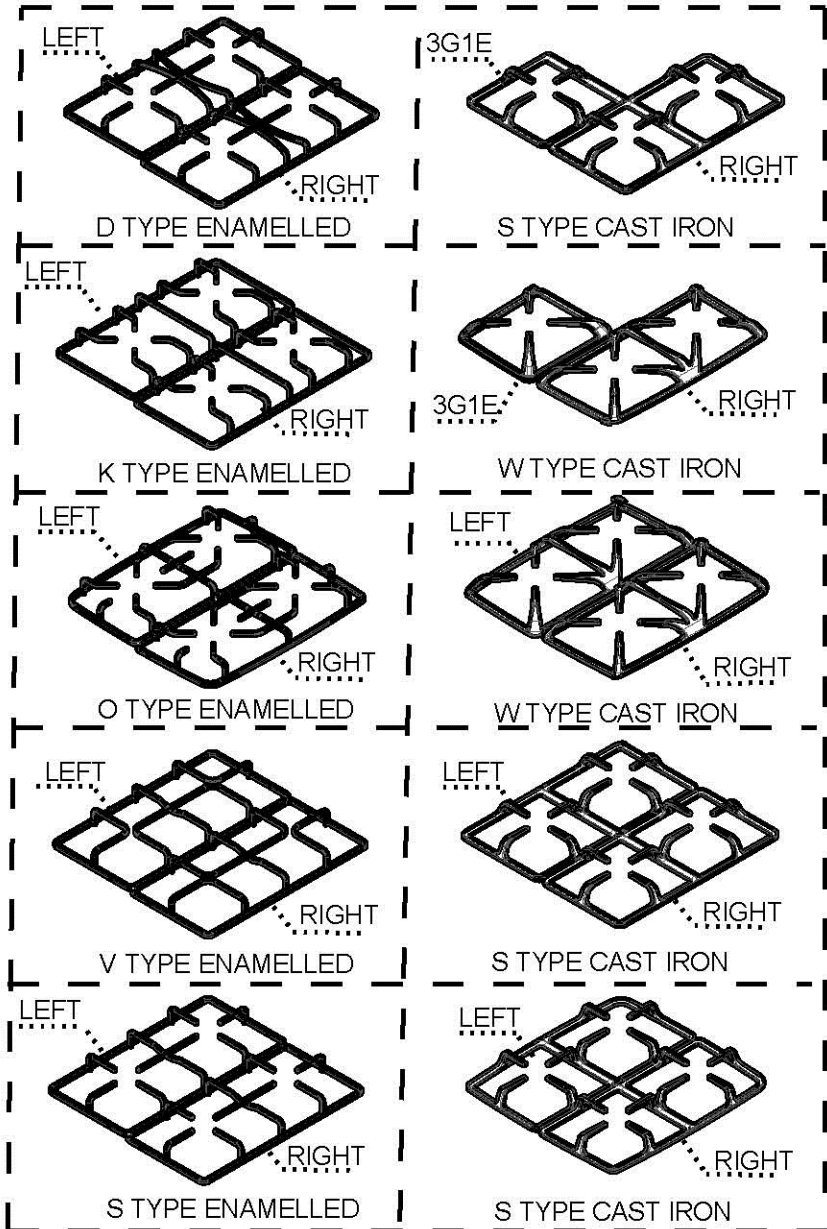


PAN SUPPORTS (OPTIONAL)

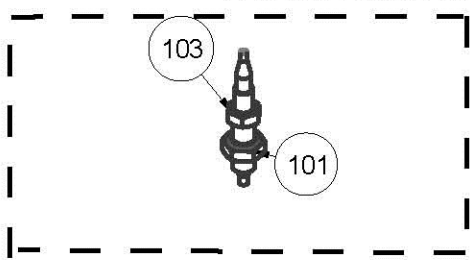


THERMOCOUPLE (OPTIONAL)

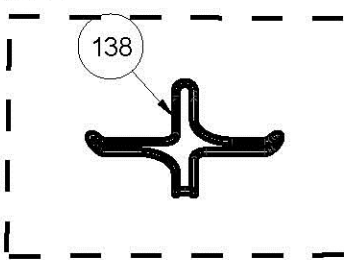


ETHNIC COFFEEPOT SUPPORT (OPTIONAL)

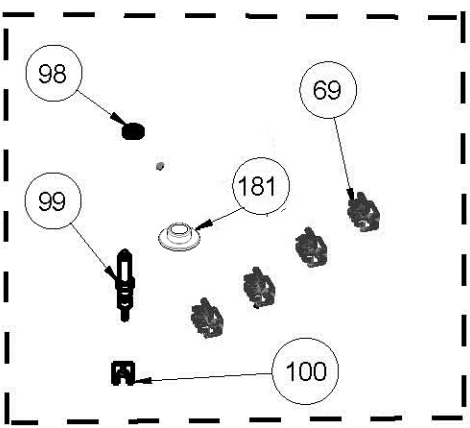


MICRO SWITCH (OPTIONAL)

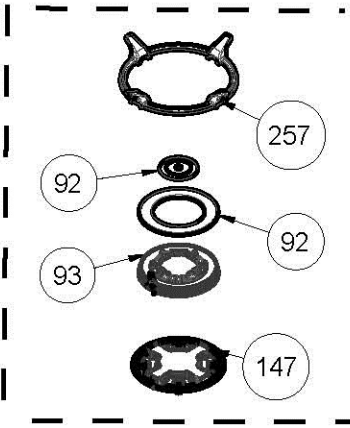


WOK BURNER (OPTIONAL)

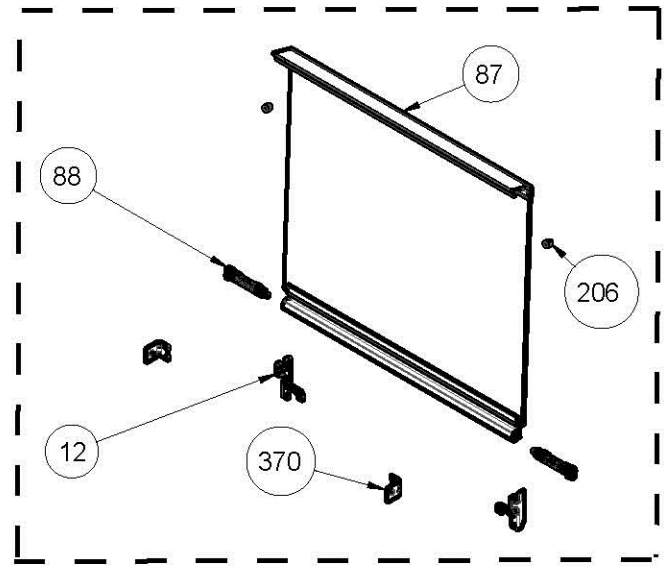 

 
GLASS LID OPTIONAL (AVAILABLE ONLY FOR FRAMED HOBS)

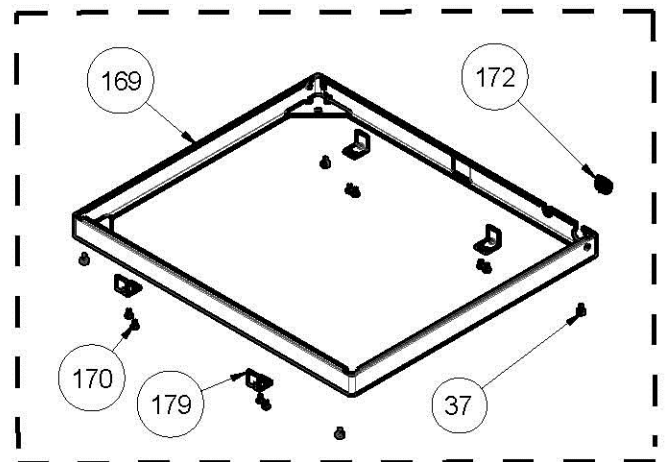


COOKTOP FRAME (ONLY FOR TABLE-TOP HOBS)

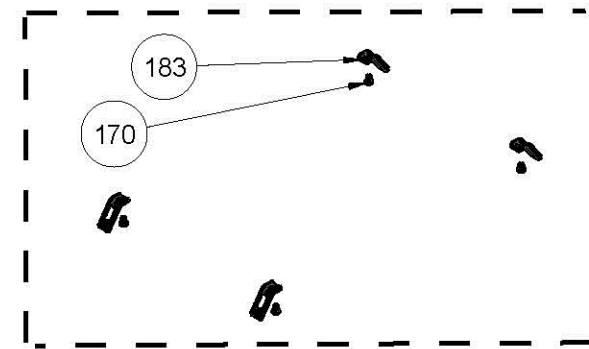 

 ASSEMBLY BRACKET (ONLY FOR BUILT-IN HOBS)

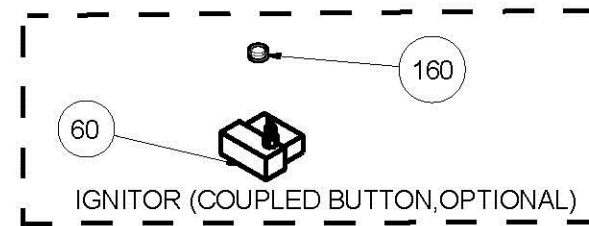

IGNITOR (COUPLED BUTTON, OPTIONAL)

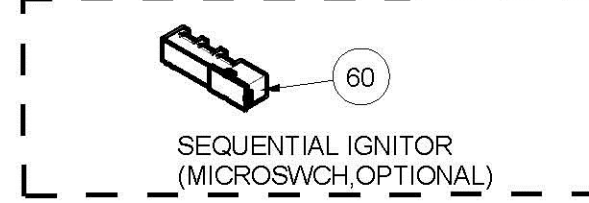 

SEQUENTIAL IGNITOR (MICROSWCH, OPTIONAL)

GAS HOBS IGNITION SYSTEMS