

1

6x
(38 mm)
Torx T20

2

4x
(25 mm)

3

2x

4

5

2x

6

7

8

2x
(15 mm)
Torx T20

PH 2

24 mm

Ø 3 mm

Torx T20

Scissors

*

EN Only certain models.
If the following parts are not supplied with your dishwasher, they are not intended for your specific model.

AR	في موديلات معينة.	IT	Solo per alcuni modelli.	RO	Numai la anumite modele.
BG	Само определени модели.	KK	Тек белгилі бір модельдер.	RU	Только в некоторых моделях.
CZ	Pouze některé modely.	MK	Само кај одредени модели.	SK	Iba niektoré modely.
CN	僅限部分型號。	LT	Tik tam tikri modeliai.	SL	Samo nekateri modeli.
DA	Kun visse modeller.	LV	Vienīgi noteiktiem modeļiem.	SQ	Vetëm disa modele të caktuara.
DE	Nur bei bestimmten Modellen.	NL	Alleen bepaalde modellen.	SR	Samo neki modeli.
ES	Sólo se aplica a determinados modelos.	NO	Bare enkelte modeller.	SV	Endast vissa modeller.
ET	Ainult teatud mudelitel.	PL	Dotyczy tylko wybranych modeli.	UK	Тільки в деяких моделях.
FA	فقط بعضی از مدل ها.				
FI	Vain tietyt mallit.				
FR	Uniquement pour certains modèles.				
HR	Samo na nekim modelima.				
HU	Csak bizonyos modellek esetében.				

1

L

?

XXL

Size: L/XXL

ART. NO. _____

SERIAL NO. _____

SAFETY

820-893

860-908

min. 555

600

125

55

min. 50x100

! X

2

REMOVE

Arrow pointing to the top edge of the dishwasher door.

3

REMOVE

Arrow pointing to the top edge of the dishwasher door.

4

4

Scissors icon.

5

2x

24 mm

1x

Max 0.6 Nm

Torx T20

min. 5 mm

min. 3 mm

! X

6

[mm]

L 640-720

XXL 700-800

XXL 720-800 FANDRY

596

L 3-10 kg

XXL 3-9 kg

! X

*

Only Certain Models

2x

2x

Torx T20

! X

7

96

7

8

2x (15 mm) Torx T20

Ø 3 mm

12 mm

! X

895619-01

We reserve the right to make changes.

