











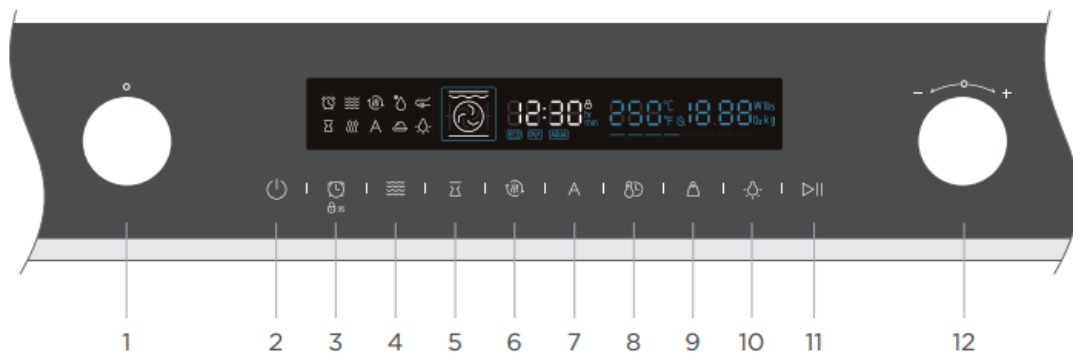

Mechanical oven


Rotate the knob to the related function position.









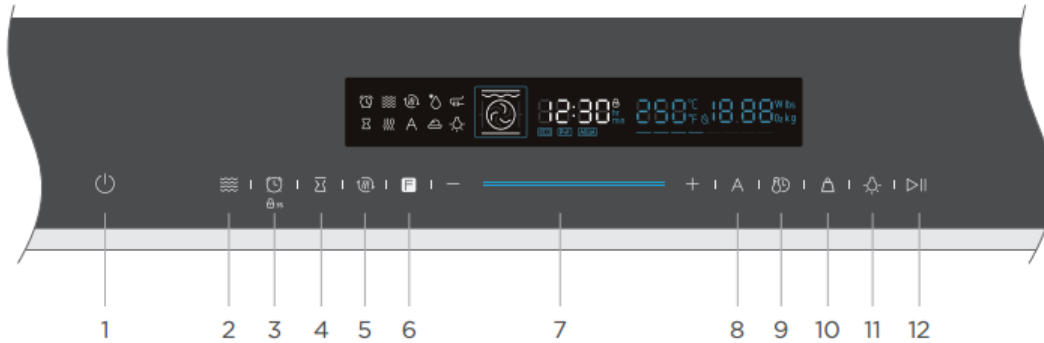





1. Oven - Function	Turn this knob to change heating mode.
 2. ON / OFF	Switch on and off oven.
 3. Timer / Child-Proof Lock	Use timer function/use child-proof lock with 3s press.
 4. Microwave symbol	Use microwave and microwave combination function.
 5. End time	Set an end time to the cooking duration.
 6. Quick preheat	Set a duration time then select function & set clock in standby mode.
 7. Auto recipes	Press to use autorecipes.
 8. Clock/Time/Temperature	Set clock in standby mode/Change between time setting and temperature stting.
 9. Weight	Press to set weight when you use autorecipes.
 10. Lamp	Switch on and off lamp.
 11. Start/Pause	Start and pause the cooking process.
 12. Adjust	Change the adjustment values shown in the display.

Electronic oven

Press the touching control buttons to adjust the function temperature and time, different touching control buttons are shown on below chart



	1. ON / OFF	Switch on and off oven.
	2. Micro wave symbol	Use microwave and microwave combination function.
	3. Timer / Child-Proof Lock	Use timer function/use child-proof lock with 3s press
	4. End time	Set an end time to the cooking duration.
	5. Quick preheat	Use this to have a quick preheat.
	6. F-symbol	Touch the F-symbol to select functions. You can fast switching by a long press.
	7. Slider	You can use the slider or "+/-"symbol nearby to change the adjustment values shown in the display.
	8. Auto recipes	Press to use autorecipes.
	9. Clock/Time/Temperature	Set clock in standby mode/Change between time setting and temperature stting.
	10. Weight	Press to set weight when you use autorecipes.
	11. Lamp	Switch on and off lamp.
	12. Start	Start and pause the cooking process.