


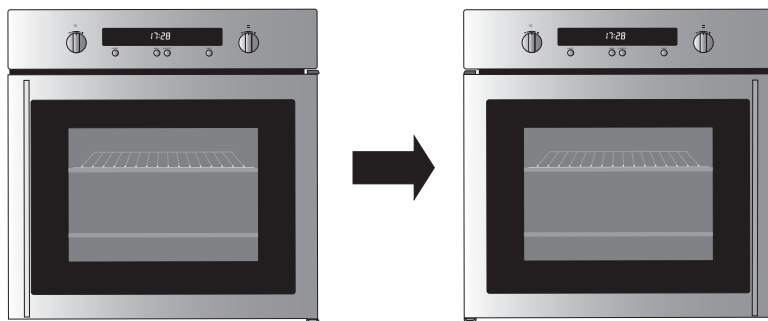

instructions for use

electric oven

reversibility of the side swing door

brugsanvisning

elektrisk ovn

vending af sidehængt ovndør

English

These instructions are provided for the safety of the users and those living with them. So read them carefully before carrying out the oven door reversibility.

Always keep these instructions with the appliance. Should the appliance be passed on to third persons or sold, or if you leave this appliance behind when you move house, it is very important that the new user has access to these instructions and the accompanying information.

If necessary, it is possible to reverse the oven door. This operation should be carried out by **authorized personnel ONLY**.

Customers are recommended not to carry out this operation themselves. Complaints as a result of changing the door direction are **excluded from the guarantee**.

Installation and connection must be done in compliance with the regulations in force. Any interventions must be carried out when the appliance is switched off. Only accredited engineers may work on the appliance.

The manufacturer disclaims any liability if the safety measures are not observed.

Contents

Introduction	5
Removing the right-hinged door	5
Removing the oven from the cabinet	5
Position of the door hinges and latch	6
Removing the door	7
Position of the hinge screws	7
Removing the front panel screw	7
Close-up view of hinge screw	7
Removing the upper hinge	8
Close-up view of door removal	8
Removing the terminal supports	9
Removing the upper profile	9
Close-up view of upper profile	9
Removing the inner door glasses	10
Close-up view of rubber distance holder	11
Removing the lower terminals	11

Close-up view of lower terminal	11
Repositioning the lower terminals	12
Close-up view of securing lower terminals	13
Re-positioning rubber distance holders	13
Re-inserting the inner door glasses	14
Re-inserting the upper profile	14
Re-inserting the door with right-to-left opening	15
Reversal of aperture from right to left	15
Removing the door latch	15
Removing the latch masking cap	15
Refitting the door latch on the opposite side	16
Removing the lower hinge	16
Reversing the hinge support upright	17
Positioning the hinge support upright	18
Fixing the screws in the upper section of the hinge support upright	18
Fixing the screws in the lower section of the hinge support upright	19
Repositioning the hinge from upper section to lower section	19
Replacing the lower hinge	19
Removing the upper masking cap	20
Repositioning the upper masking cap	20
Refitting the door to the oven	21
Refitting the door with aperture from right to left	21
Repositioning the upper hinge	21
Securing the upper hinge	22
Fitting the front control panel	22
Adjusting the alignment of the door	23
Door alignment screw	23
Tightening the screws	24
Oven with right-to-left door opening	24

Introduction

Purpose of this user manual

The purpose of this manual is to provide simple instructions for reversing the hinged-type door fitted to ATAG ovens.

Removing the right-hinged door

In order to remove the door, it is necessary to remove the oven from the cabinet.

Removing the oven from the cabinet

To extract the oven from the cabinet, remove the four screws which secure the appliance to the cabinet. These screws are located on the front of the frame (see Fig. 1 and 2).

Fig. 1

- 1 - Upper screw (left)
- 2 - Upper screw (right)
- 3 - Lower screw (left)
- 4 - Lower screw (right)



Fig. 2

- 1 - Screw securing the oven to the cabinet
- 2 - Washer for screw nr.1



Position of the door hinges and latch


Fig. 3

- 1 - Upper hinge
- 2 - Lower hinge
- 3 - Door latch



Fig. 4

- 1 - Upper hinge
- 2 - Lower hinge
- 3 - Hinge support

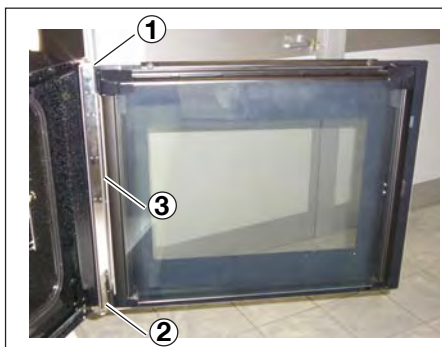

Removing the door


To remove the oven door, proceed as follows:

1. Remove the screw which secures the front panel (see Fig. 6).
2. Remove the screws which secure the upper hinge (see Fig. 7).
3. Remove the upper hinge (hold the door in position to ensure that it does not fall) (see Fig. 8)

Position of the hinge screws

Fig. 5

- 1 - Screws for upper hinge
- 2 - Hinge support
- 3 - Screws for lower hinge

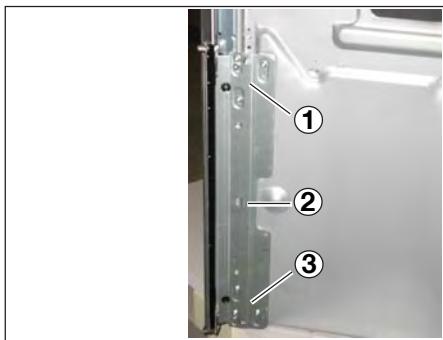

Removing the front panel screw

Fig. 6

- 1 - Front panel
- 2 - Upper screw



Close-up view of hinge screw

Fig. 7

- 1 - Upper hinge
- 2 - Upper screw
- 3 - Lower screw




Removing the upper hinge

To remove the upper hinge:

1. Remove the screw which secures the front panel (see Fig. 6).
2. Remove the screws which secure the upper hinge (see Fig. 7).
3. Move the front panel slightly upwards and outwards to release the upper hinge (see Fig. 8).
4. Extract the hinge by moving upwards and towards the interior of the oven (see Fig. 9).

Fig. 8

- 1 - Front control panel
2 - Upper hinge

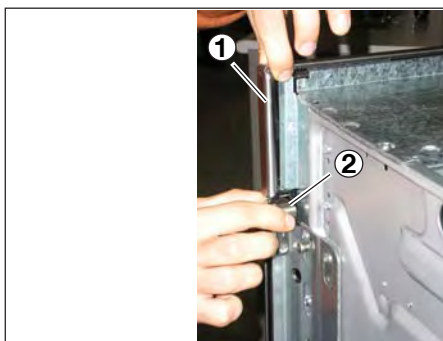

Close-up view of door removal

To remove the oven door:

1. Remove the upper hinge.
2. Move the door upwards and outwards to remove (see Fig. 9).

Fig. 9

- 1 - Front control panel
2 - Oven door



Removing the terminal supports

Removing the upper profile

Remove the upper profile (a certain force is required to do this) (see Fig. 10).

Fig. 10

- 1 - Upper profile
- 2 - Support upright for inner door glass


NOTE: The upper profile is made up of a support and two upper terminals. They come in a single unit.



Close-up view of upper profile

Fig. 11

- 1 - Upper profile
- 2 - Support upright for inner door glass

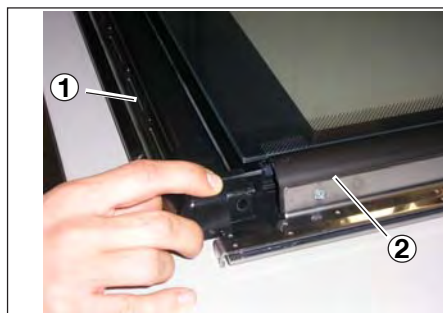

Removing the inner door glasses

After removing the upper profile, it is possible to slide out the inner glass panel(s) (see Fig. 12 and 13).

The panels are kept in place by two side rubber distance holders.

Fig. 12

- 1 - Inner glass door (external)
- 2 - Support upright for inner door glass
- 3 - Rubber distance holder (right)
- 4 - Rubber distance holder (left)
- 5 - Lower terminal support

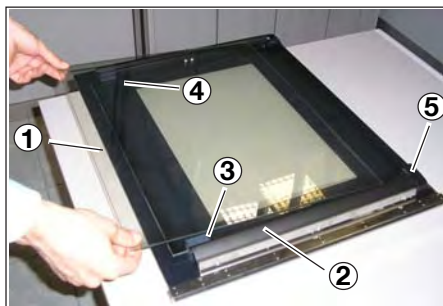


Fig. 13


- 1 - Inner glass door (intermediate)
- 2 - Rubber distance holder (right)
- 3 - Rubber distance holder (left)



Close-up view of rubber distance holder

Fig. 14

- 1 - Oven door inner glass
- 2 - Rubber distance holder

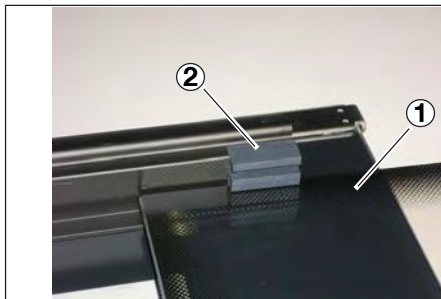

Removing the lower terminals

To remove the lower terminal supports, unscrew the internal screw (see Fig. 15).

Fig. 15


- 1 - Lower terminal support
- 2 - Support upright for oven door glass
- 3 - Internal screw



Close-up view of lower terminal

Fig. 16


- 1 - Lower terminal support
- 2 - Support upright for oven door glass

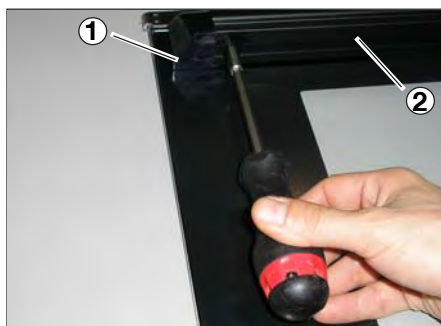

After removing the inner glass panels and the screws which secure the terminals, detach the lower terminals (a certain force is required for this) (see Fig. 17).

Fig. 17

- 1 - Lower terminal support (left)
- 2 - Lower terminal support (right)

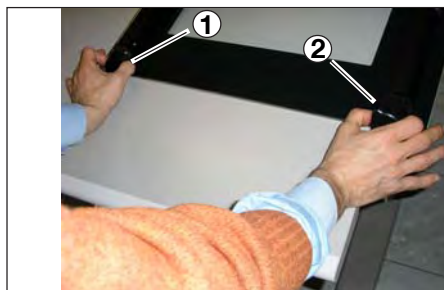

Repositioning the lower terminals

Reposition the lower terminals in the support uprights for the inner glass panels in the new position (see Fig. 18).


Fig. 18

- 1 - Lower terminal support (left)
- 2 - Lower terminal support (right)



Fig. 19

Representative diagram of the repositioning of the terminals.

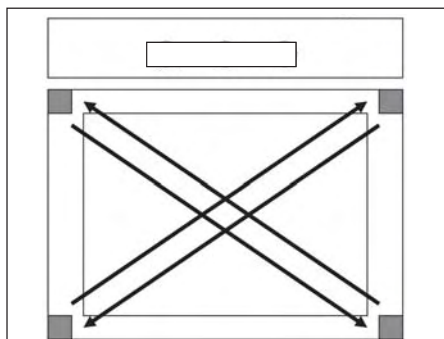


Close-up view of securing lower terminals

Secure the lower terminals in the new position with the screws.

Fig. 20

- 1 - Lower terminal support
- 2 - Screw
- 3 - Hinge support

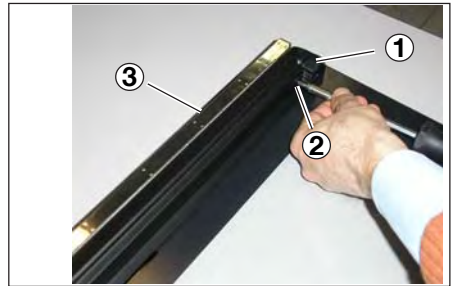

Re-positioning rubber distance holders

Before placing the door glasses back position the two rubber distance holders as shown in figure 21.

Fig. 21

- 1 - Rubber distance holder (left)
- 2 - Rubber distance holder (right)



Re-inserting the inner door glasses

Re-insert the inner door glasses (see Fig. 22).


Note:

To correctly mount the inner glass with side decors along the frame (intermediate), the surface marked with stripes has to face the oven cavity in a way that, when touching the surface on sight, the light roughness of the silk-screen printing is perceptible.

To correctly mount the inner glass with side decors on two lateral sides (external), the surface marked with stripes has to face the oven door in a way that, when touching the surface on sight, the light roughness of the silk-screen printing is not perceptible.

Fig. 22

- 1 - Inner glass
- 2 - Support upright for inner glass

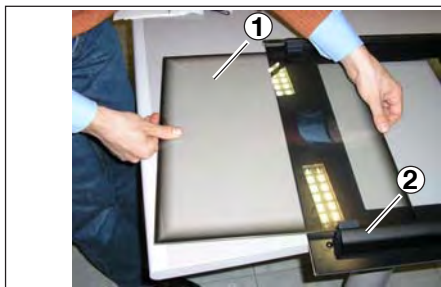


Re-inserting the upper profile

Proceed as follows to replace the upper profile:

- Place the upper profile by inserting it into the support uprights.
- Press it until fully inserted (see Fig. 23).

Fig. 23

- 1 - Upper profile
- 2 - Support upright for inner glass (right)
- 3 - Support upright for inner glass (left)

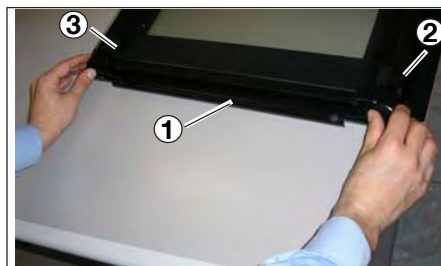

Re-inserting the door with right-to-left opening


Reversal of aperture from right to left

Close-up view of the door latch

Before mounting the door with aperture on the right, it is necessary to re-position the latch (Fig. 24).

Fig. 24

- 1 - Door latch
- 2 - Front frame

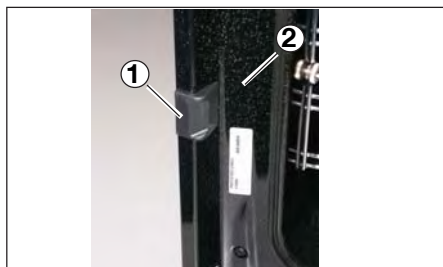


Removing the door latch

Remove the door latch by unscrewing the screws which secure it in position (Fig. 25).

Fig. 25

- 1 - Support bracket for door latch
- 2 - Upper screw
- 3 - Lower screw

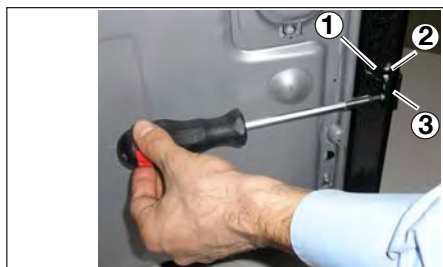


Removing the latch masking cap

Before refitting the door latch on the opposite side, the masking cap must be removed. To do so, it is sufficient to use a flat-head (normal) screwdriver (see Fig. 26).

Fig. 26

- 1 - Latch masking cap
- 2 - Standard screwdriver
- 3 - Front frame

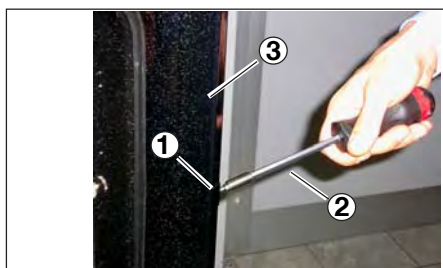


Refitting the door latch on the opposite side

Position the door latch with its support bracket on the opposite side and secure it using two screws (see Fig. 27).

Fig. 27

- 1 - Door latch
- 2 - Support bracket for door latch

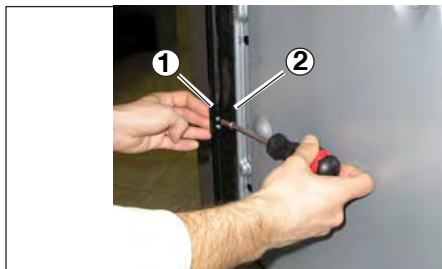

NOTE: Remember to fit the masking cap on the side opposite to the door latch.

Removing the lower hinge

To remove the lower hinge simply remove the two screws which secure it in position (see Fig. 28).

Fig. 28

- 1 - Upper hinge screw
- 2 - Lower hinge screw
- 3 - Lower hinge



NOTE : Before removing the hinge support upright, it is necessary to remove the lower hinge.

Reversing the hinge support upright

Removing the hinge support upright

To remove the hinge support upright, remove the three upper screws and the three lower screws (see Fig. 29 and 30).

Fig. 29

- 1 - Hinge support upright
- 2 - Upper screws
- 3 - Lower screws
- 4 - Door alignment screw


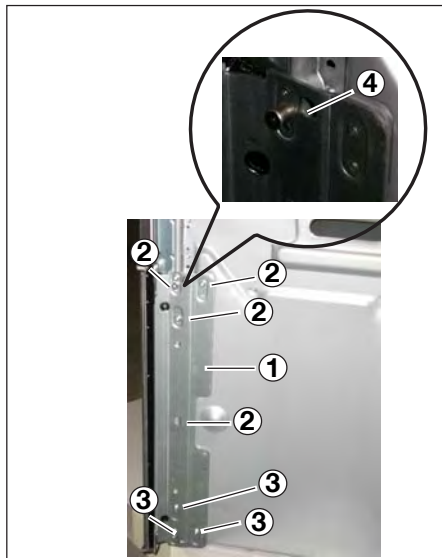


Fig. 30

- 1 - Hinge support upright
- 2 - Rear screw
- 3 - Front screw
- 4 - Lower screw

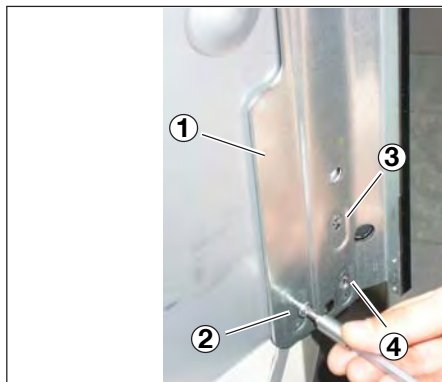


Positioning the hinge support upright

To place the hinge support upright in the new position, simply place it in alignment with the holes and secure using three screws in the upper section and three in the lower section.

Fig. 31

- 1 - Hinge support upright
- 2 - Door alignment screw

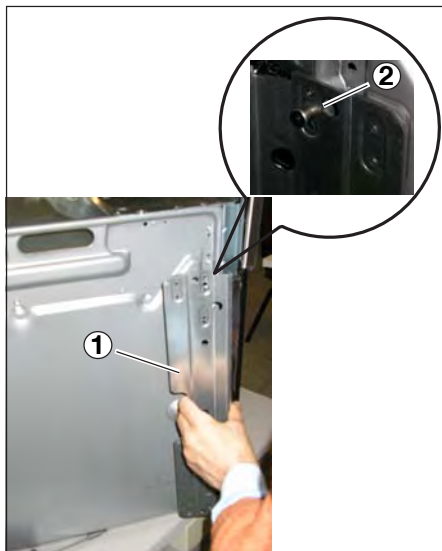


NOTE: Before assembling the hinge support, it is necessary to re-position the door alignment screw. This screw must always be positioned in the upper section of the upright (see Fig. 31).

Fixing the screws in the upper section of the hinge support upright

Fig. 32

- 1 - Front screw
- 2 - Position of rear screw
- 3 - Position of lower screw
- 4 - Hinge support upright

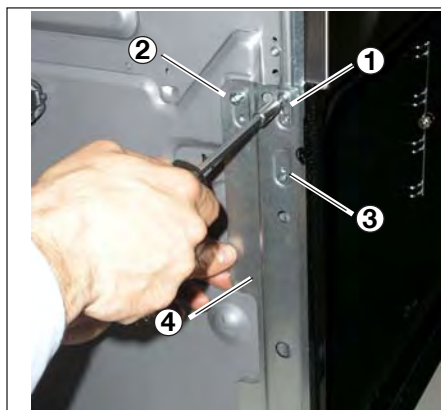

Fixing the screws in the lower section of the hinge support upright

Fig. 33

- 1 - Hinge support upright
- 2 - Position of rear screw
- 3 - Position of front screw
- 4 - Position of lower screw



Repositioning the hinge from upper section to lower section


In order to secure the door to the left side, it is necessary to remove the upper hinge (which was originally in the upper section - see "Position of the door hinges and latch" - page 6) and fit it in the lower left-hand position.

Replacing the lower hinge

To replace the lower hinge, simply position the hinge and secure using the two screws (see Fig. 34).

Fig. 34

- 1 - Upper screw
- 2 - Lower screw
- 3 - Lower hinge

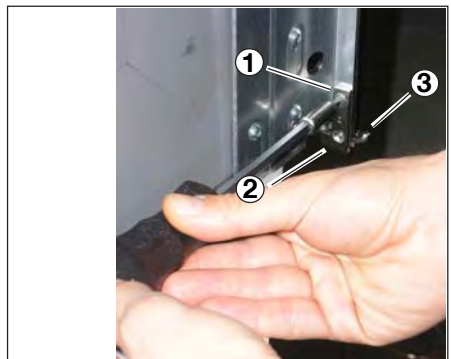


Removing the upper masking cap

Before fixing the right-aperture door, it is necessary to re-position the upper masking cap.

To do so, it is sufficient to use a flat-head (normal) screwdriver (see Fig. 35).

Fig. 35

- 1 - Front control panel
- 2 - Masking cap
- 3 - Screwdriver

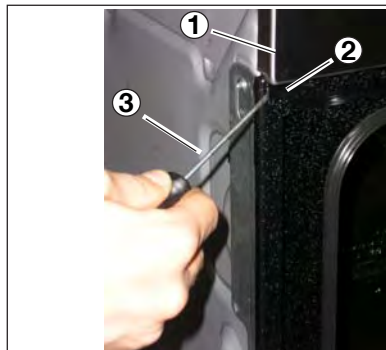

Repositioning the upper masking cap

To replace the upper masking cap, insert into the hole, first at the upper edge and then at the lower lip (see Fig. 36).

Fig. 36

- 1 - Front control panel
- 2 - Masking cap



Refitting the door to the oven

Refitting the door with aperture from right to left

Position the door, aligning the lower hinge pin with the hole in the hinge support (see Fig. 37).

Fig. 37

- 1 - Oven door
- 2 - Lower hinge




Repositioning the upper hinge

Position the upper hinge while holding the door in position and align the upper hinge pin with the hole in the hinge support (see Fig. 38).

Fig. 38

- 1 - Upper hinge
- 2 - Hinge support

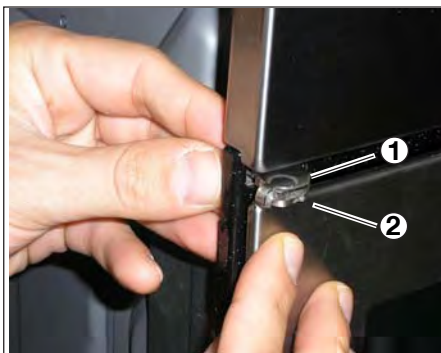


Securing the upper hinge

Secure the upper hinge using the two screws (see Fig. 39).

Fig. 39

- 1 - Upper hinge
- 2 - Upper screw
- 3 - Lower screw

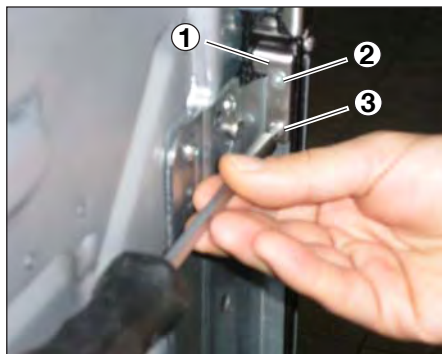


Fitting the front control panel

Secure the control panel using the screw (see Fig. 40).

Fig. 40

- 1 - Front control panel
- 2 - Screw

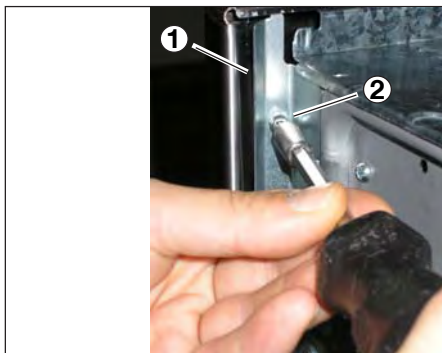

Adjusting the alignment of the door

To align the door with the control panel (see Fig. 41) adjust the alignment screw (see Fig. 29 Pos. 4) in the following sequence:

1. Unscrew the two upper screws (see Fig. 43).
2. Adjust the alignment screw so that the door is aligned with the front control panel (see Fig. 42).
3. Tighten the two upper screws (see Fig. 43 Pos. 1 and 2)

Fig. 41



Door alignment screw

Fig. 42


- 1 - Door alignment screw
- 2 - Hinge support upright



Tightening the screws

Fig. 43

- 1 - Upper screw (front)
- 2 - Upper screw (rear)

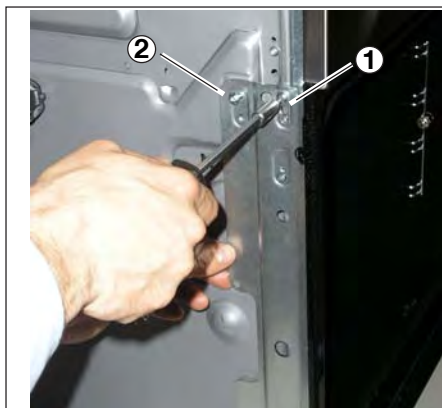

Oven with right-to-left door opening



Dansk

Denne vejledning er givet af hensyn til brugerens og de andre beboeres sikkerhed. Læs den derfor grundigt igennem, inden ovndøren vendes. Lad altid vejledningen følge med apparatet. Hvis apparatet overdrages eller sælges til en anden, eller hvis det følger med boligen ved et salg, er det meget vigtigt, at den/de nye bruger(e) har adgang til brugsanvisningen og oplysningerne heri.

Hvis det er nødvendigt, kan ovndøren vendes. Dette indgreb bør **KUN udføres af en autoriseret montør**.

Det frarådes kunder selv at udføre dette indgreb. Reklamationer som følge af, at dørens hængsling er ændret, **dækkes ikke af garantien**.

Ved indbygning og installation skal gældende regler nøje overholdes. Ethvert indgreb skal udføres, mens apparatet er slukket. Indgreb må kun udføres af en autoriseret montør.

Producenten fralægger sig ethvert ansvar, hvis sikkerhedsforanstaltningerne ikke er blevet fulgt.

Indhold

Indledning	27
Afmontere højrehængt dør	27
Tage ovnen ud af kabinettet	27
Placering, dørhængsler og lås	28
Afmontere døren	29
Placering, skruer i hængsel	29
Skruer frontpanelet af	29
Detalje, skrue i hængsel	29
Fjerne øverste hængsel	30
Detalje, aftagning af dør	30
Tage endebøsninger af	31
Fjerne øverste profil	31
Detalje, øverste profil	31
Fjerne de inderste glas	32
Detalje, gummi afstandsholder	33
Tage de nederste endebøsninger af	33
Detalje, nederste endebøsning	33

Sætte de nederste endebøsninger på	34
Detalje, fastgørelse af nederste endebøsning	35
Påsætte afstandsholdere af gummi	35
Sætte inderste glas i	36
Sætte øverste profil i	36
Sætte døren i med åbning fra højre mod venstre	37
Ændre åbning fra højre til venstre	37
Fjerne dørlåsen	37
Fjerne blindprop (lås)	37
Montere dørlåsen i modsatte side	38
Skrue nederste hængsel af	38
Vende lodret bærebæslag til hængsel	39
Placere lodret bærebæslag til hængsel	40
Skrue lodret bærebæslag til hængsel fast foroven	40
Skrue lodret bærebæslag til hængsel fast forneden	41
Flytte hængslet fra øverste del til nederste del	41
Montere nederste hængsel	41
Fjerne øverste blindprop	42
Sætte øverste blindprop i	42
Montere døren på ovnen	43
Montere døren med åbning fra højre mod venstre	43
Montere øverste hængsel	43
Skrue øverste hængsel fast	44
Montere betjeningspanel på front	44
Rette døren til	45
Justeringsskrue, dør	45
Stramme skruerne	46
Ovnen med åbning fra højre mod venstre	46

Indledning

Formålet med brugsanvisningen

Formålet med denne brugsanvisning er at give en enkel vejledning i at vende ATAG-ovnens hængslede dør.

Afmontere højrehængt dør

Inden døren afmonteres, skal ovnen tages ud af kabinettet.

Tag ovnen ud af kabinettet

Fjern først de fire skruer, hvormed apparatet er fastgjort i kabinettet. Skruerne sidder på rammens forside (se Fig. 1 og 2).

Fig. 1

- 1 - Øverste skrue (til venstre)
- 2 - Øverste skrue (til højre)
- 3 - Nederste skrue (til venstre)
- 4 - Nederste skrue (til højre)



Fig. 2

- 1 - Skrue, hvormed ovnen er fastgjort i kabinettet
- 2 - Skive til skrue nr. 1



Placering, dørhængsler og lås


Fig. 3

- 1 - Øverste hængsel
- 2 - Nederste hængsel
- 3 - Dørlås



Fig. 4

- 1 - Øverste hængsel
- 2 - Nederste hængsel
- 3 - Hængselbeslag

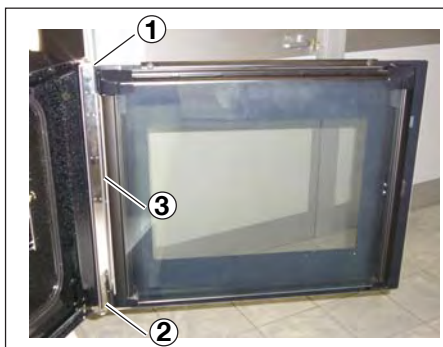

Afmontere døren


Ovndøren tages af på flg. måde:

1. Fjern den skrue, der holder frontpanelet (se Fig. 6).
2. Fjern de skruer, der holder øverste hængsel (se Fig. 7).
3. Fjern øverste hængsel (hold på døren, så den ikke falder ned) (se Fig. 8)

Placering, skruer i hængsel

Fig. 5

- 1 - Skruer til øverste hængsel
- 2 - Hængselbeslag
- 3 - Skruer til nederste hængsel

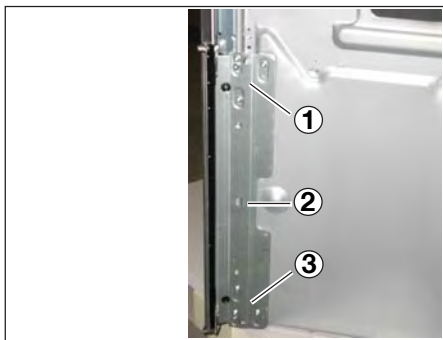

Skrue frontpanelet af

Fig. 6

- 1 - Frontpanel
- 2 - Øverste skrue



Detalje, skrue i hængsel

Fig. 7

- 1 - Øverste hængsel
- 2 - Øverste skrue
- 3 - Nederste skrue




Fjerne øverste hængsel

Sådan fjernes det øverste hængsel:

1. Fjern den skrue, der holder frontpanelet (se Fig. 6).
2. Fjern de skruer, der holder øverste hængsel (se Fig. 7).
3. Ryk frontpanelet let opad og udad, til øverste hængsel er fri (se Fig. 8).
4. Træk hængslet ud ved at skubbe det opad og mod ovenrummet (se Fig. 9).

Fig. 8

- 1 - Betjeningspanel
- 2 - Øverste hængsel

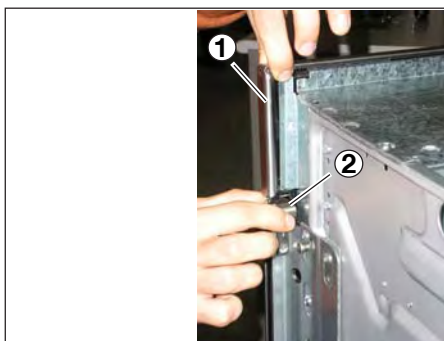

Detalje, aftagning af dør

Sådan tages ovndøren af:

1. Fjern øverste hængsel.
2. Ryk døren opad og udad, til den kan løftes af (se Fig. 9).

Fig. 9

- 1 - Betjeningspanel
- 2 - Ovndør



Tage endebøsninger af

Fjerne øverste profil

Tag den øverste profil af (der skal bruges lidt kræfter) (se Fig. 10).

Fig. 10

- 1 - Øverste profil
- 2 - Lodret bærebælsag til indvendigt glas i dør


BEMÆRK: Den øverste profil består af en bæring med to endebøsninger foroven. De leveres samlet.



Detalje, øverste profil

Fig. 11

- 1 - Øverste profil
- 2 - Lodret bærebælsag til indvendigt glas i dør

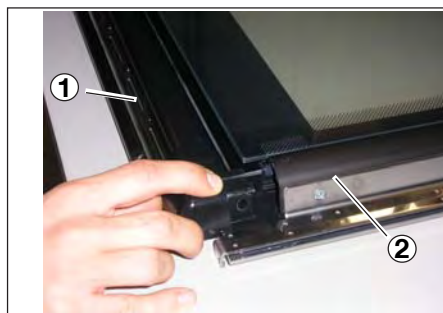

Fjerne de inderste glas

Når den øverste profil er fjernet, kan det/de indvendige glas skubbes ud (se Fig. 12 og 13).

I siderne holdes glassene på plads af to gummi afstandsholdere.

Fig. 12

- 1 - Indvendigt glas i dør (ydersiden)
- 2 - Lodret bærebælske til indvendigt glas i dør
- 3 - Gummi afstandsholder (højre)
- 4 - Gummi afstandsholder (venstre)
- 5 - Nederste endebøsning

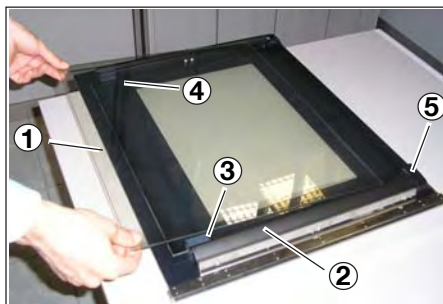


Fig. 13


- 1 - Indvendigt glas i dør (mellemste glas)
- 2 - Gummi afstandsholder (højre)
- 3 - Gummi afstandsholder (venstre)



Detalje, gummaifstandsholder

Fig. 14

- 1 - Indvendigt glas i ovndør
- 2 - Gummaifstandsholder

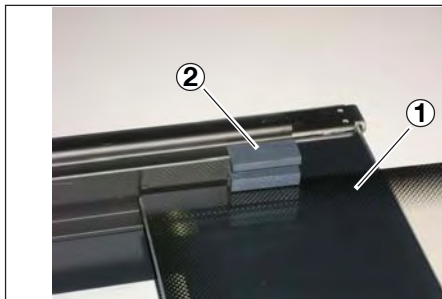

Tage de nederste endebøsninger af

De nederste endebøsninger fjernes ved at skruer den indvendige skrue ud (se Fig. 15).

Fig. 15


- 1 - Nederste endebøsning
- 2 - Lodret bærebælg til glas i ovndør
- 3 - Indvendig skrue



Detalje, nederste endebøsning

Fig. 16

- 1 - Nederste endebøsning
- 2 - Lodret bærebælg til glas i ovndør

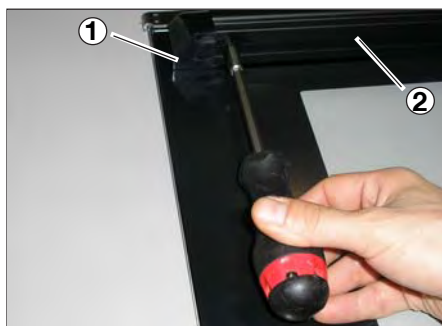


Når de indvendige glas er taget ud, og skruerne er skruet ud af de nederste endebøsninger, kan endebøsningerne tages ud (det kræver lidt kræfter) (se Fig. 17).

Fig. 17

1 - Nederste endebøsning (venstre)

2 - Nederste endebøsning (højre)

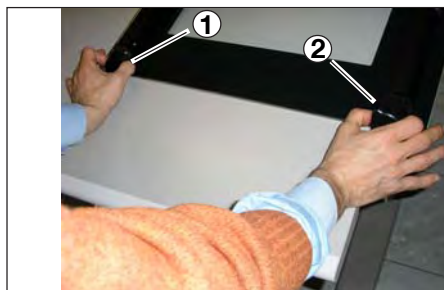

Sætte de nederste endebøsninger på

De nederste endebøsninger i de lodrette bærebjelke til de indvendige glas sættes på den nye placering (se Fig. 18).

Fig. 18


1 - Nederste endebøsning (venstre)

2 - Nederste endebøsning (højre)



Fig. 19

Skematisk tegning af endebøsningernes placering.

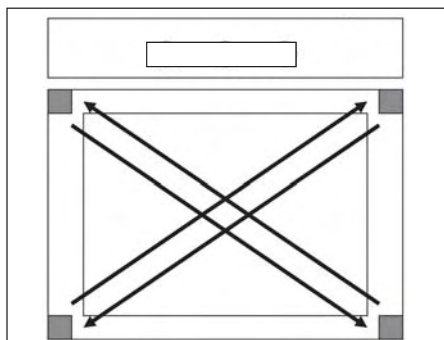


Detalje, fastgørelse af nederste endebøsning

Skrue de nederste endebøsninger fast på den nye placering.

Fig. 20

- 1 - Nederste endebøsning
- 2 - Skrue
- 3 - Hængselbeslag

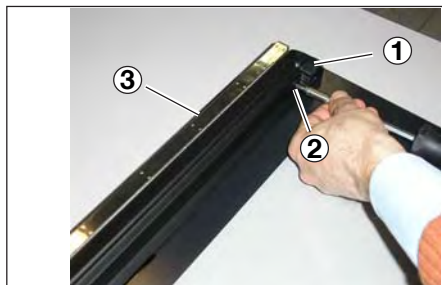

Påsætte afstandsholdere af gummi

Inden glassene sættes i ovndøren, sættes de to gummi afstandsholdere på plads som vist på Fig. 21.

Fig. 21

- 1 - Gummi afstandsholder (venstre)
- 2 - Gummi afstandsholder (højre)



Sætte inderste glas i

Sæt de inderste glas i døren (se Fig. 22).


Bemærkning:

Det mellemste glas med påtryk langs rammen skal vende mod ovnrummet, så de påtrykte striber (serigrafien) på glasset føles en anelse ru, når man rører den synlige overflade.

Det inderste glas med påtryk på de to lodrette sider (yderst) skal vende mod ovndøren, så de påtrykte striber ikke føles ru, når man mærker efter på glassets yderside.

Fig. 22

- 1 - Indvendigt glas
- 2 - Lodret bærebeslag til indvendigt glas

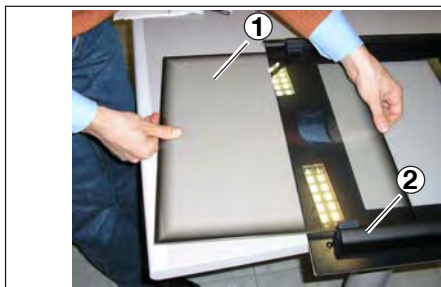


Sætte øverste profil i

Øverste profil sættes i på følgende måde:

- Sæt den øverste profil på ved at skyde den ind i de lodrette bærebeslag.
- Tryk den helt ind på plads (se Fig. 23).

Fig. 23

- 1 - Øverste profil
- 2 - Lodret bærebeslag til indvendigt glas (højre)
- 3 - Lodret bærebeslag til indvendigt glas (venstre)

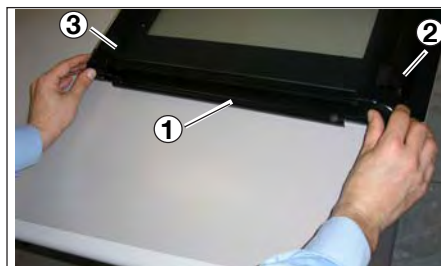

Sætte døren i med åbning fra højre mod venstre


Ændre åbning fra højre til venstre

Detalje, dørens lås

Inden døren monteres med åbning til højre skal låsen flyttes (Fig. 24).

Fig. 24

- 1 - Dørlås
- 2 - Frontramme

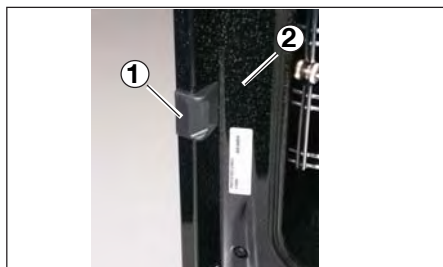


Fjerne dørlåsen

Skru skruerne ud af dørlåsen, og tag den af (Fig. 25).

Fig. 25

- 1 - Beslag til dørlås
- 2 - Øverste skrue
- 3 - Nederste skrue

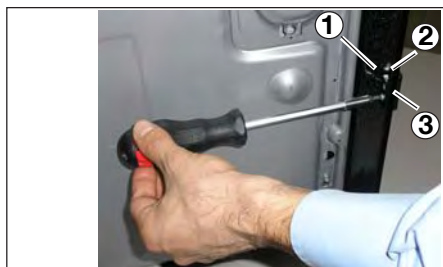


Fjerne blindprop (lås)

Inden låsen sættes på i modsatte side skal blindproppen fjernes. Det gøres med en lige (almindelig) skruetrækker (se Fig. 26).

Fig. 26

- 1 - Blindprop (lås)
- 2 - Standardskruetrækker
- 3 - Frontramme

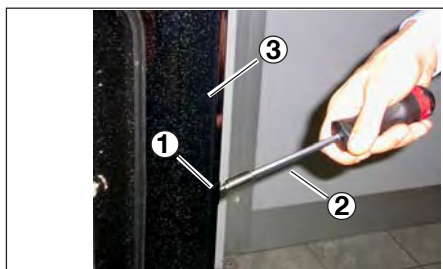


Montere dørlåsen i modsatte side

Placer dørlåsen med dens beslag på modsatte side, og skru de to skruer i (se Fig. 27).

Fig. 27

- 1 - Dørlås
- 2 - Beslag til dørlås

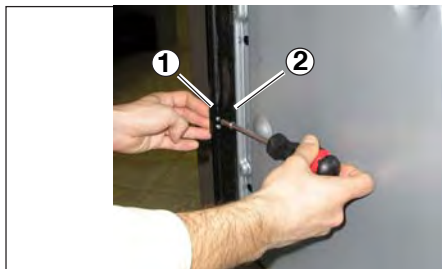

BEMÆRK: Husk at sætte blindproppen i den modsatte side af den, hvor låsen nu sidder.

Skrue nederste hængsel af

Nederste hængsel fjernes ved at skrue de to skruer ud, der holder det (se Fig. 28).

Fig. 28

- 1 - Skrue, øverste hængsel
- 2 - Skrue, nederste hængsel
- 3 - Nederste hængsel



BEMÆRK : Det nederste hængsel skal skrues af, før det lodrette bærebeslag kan fjernes.

Vende lodret bærebeslag til hængsel

Fjerne lodret bærebeslag til hængsel

Bærebeslaget til hængsel fjernes ved at skrue de tre skruer foroven og forneden ud (se Fig. 29 og 30).

Fig. 29

- 1 - Bærebeslag, hængsel
- 2 - Øverste skruer
- 3 - Nederste skruer
- 4 - Justeringsskrue, dør


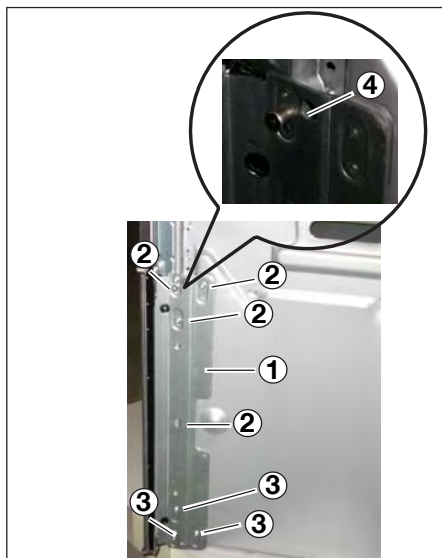


Fig. 30

- 1 - Bærebeslag til hængsel
- 2 - Skrue, bag
- 3 - Skrue, for
- 4 - Nederste skrue

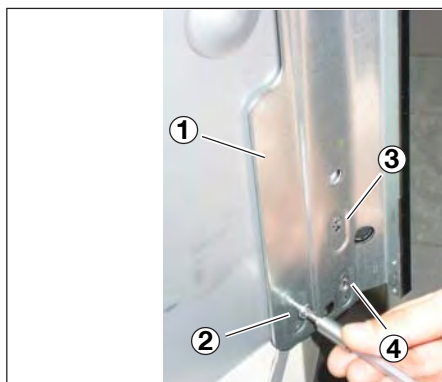


Placere bærebeslag til hængsel

Hængslets bærebeslag sættes over hullerne på den nye placering og skrues fast foroven og forneden, med tre skruer hvert sted.

Fig. 31

- 1 - Bærebeslag til hængsel
- 2 - Justeringsskrue, dør

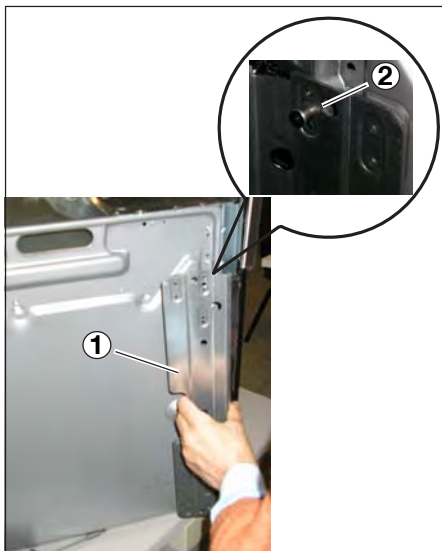


BEMÆRK: Dørens justeringsskrue skal sættes i, inden hængslets bærebeslag monteres. Denne skrue skal altid sidde i øverste del af hængselbeslaget (se Fig. 31).

Skrue lodret bærebeslag til hængsel fast foroven

Fig. 32


- 1 - Skrue, for
- 2 - Placering, bageste skrue
- 3 - Placering, nederste skrue
- 4 - Bærebeslag, hængsel

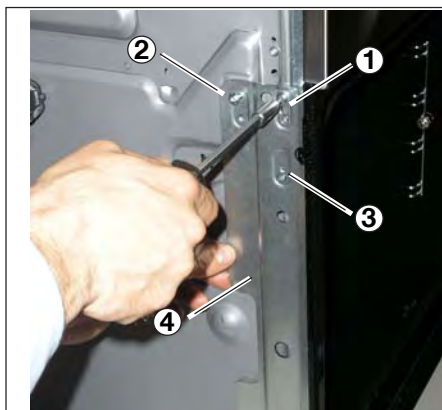

Skrue lodret bærebreslag til hængsel fast forneden

Fig. 33

- 1 - Bærebreslag til hængsel
- 2 - Placering, bageste skrue
- 3 - Placering, forreste skrue
- 4 - Placering, nederste skrue

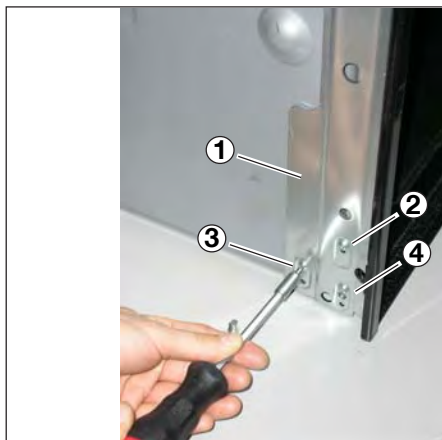

Flytte hængslet fra øverste del til nederste del


Når døren skal hængsles i venstre side, skal det øverste hængsel (dvs. det, der oprindeligt sad i øverste del - se "Placering, dørhængsler og lås" - side 28) skrues af og monteres nederst til venstre.

Montere nederste hængsel

Hængslet sættes på plads og skrues fast med de to skruer (se Fig. 34).

Fig. 34

- 1 - Øverste skrue
- 2 - Nederste skrue
- 3 - Nederste hængsel

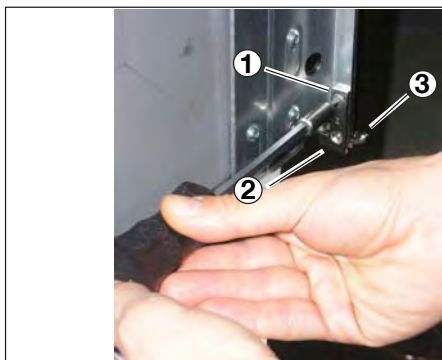


Fjerne øverste blindprop

Inden den venstrehængte dør sættes på, skal den øverste blindprop sættes i. Det gøres med en lige (almindelig) skruetrækker (se Fig. 35).

Fig. 35

- 1 - Frontpanel
- 2 - Blindprop
- 3 - Skruetrækker

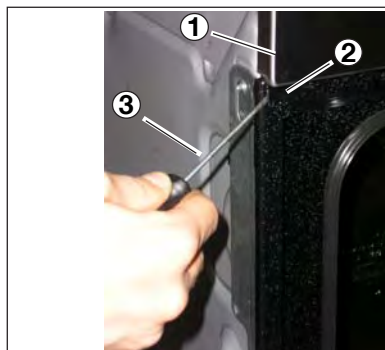

Sætte øverste blindprop i

Sæt blindproppen i hullet foroven, først ved overkanten, og så ved den nederste udragende kant (se Fig. 36).

Fig. 36

- 1 - Frontpanel
- 2 - Blindprop



Montere døren på ovnen

Montere døren med åbning fra højre mod venstre

Sæt døren på plads, så nederste hængsel tap flugter med hullet i hængselbeslaget (se Fig. 37).

Fig. 37

- 1 - Ovnør
- 2 - Nederste hængsel




Montere øverste hængsel

Placer det øverste hængsel, mens døren holdes på plads, og ret øverste hængsel tap ind, så den flugter med hullet i hængselbeslaget (se Fig. 38).

Fig. 38

- 1 - Øverste hængsel
- 2 - Hængselbeslag

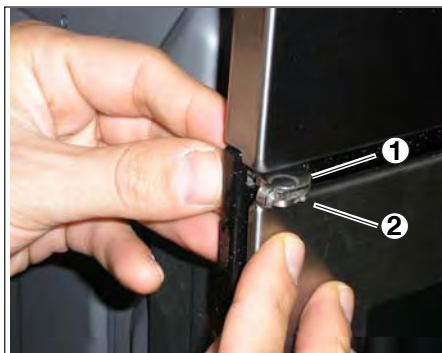


Skrue øverste hængsel fast

Øverste hængsel skrues fast med de to skruer (se Fig. 39).

Fig. 39

- 1 - Øverste hængsel
- 2 - Øverste skrue
- 3 - Nederste skrue

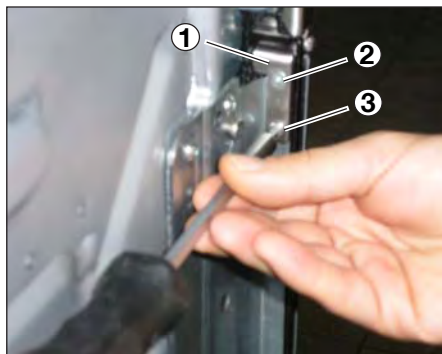


Montere betjeningspanel på front

Skru frontpanelet fast med skruen (se Fig. 40).

Fig. 40

- 1 - Frontpanel
- 2 - Skrue

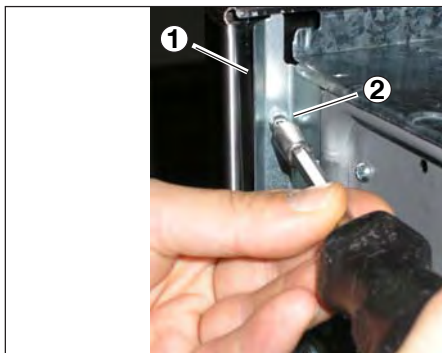

Rette døren til

Døren bringes til at flugte med frontpanelet (se Fig. 41) med justeringsskruen (se Fig. 29, nr. 4) i denne rækkefølge:

1. Skru de to øverste skruer ud (se Fig. 43).
2. Stil justeringsskruen, så døren flugter med frontpanelet (se Fig. 42).
3. Stram de to øverste skruer (se Fig. 43, nr. 1 og 2)


Fig. 41



Justeringsskrue, dør

Fig. 42


- 1 - Justeringsskrue, dør
- 2 - Bærebæslag, hængsel

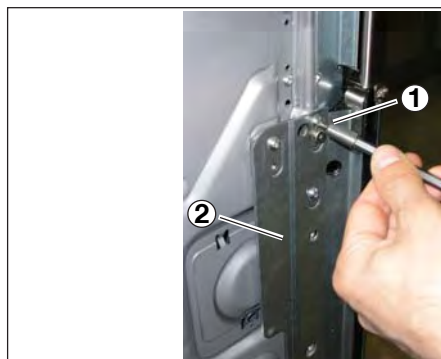

Stramme skruerne

Fig. 43

- 1 - Øverste skrue (front)
- 2 - Øverste skrue (bag)

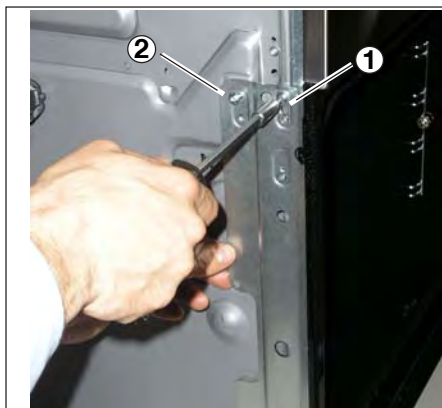

Ovnen med åbning fra højre mod venstre

