

Wiring instructions external motor WA411C and WM105BI on WS9011MAX,WS1211MAX,ES1211MAX,ES1511MAX
Aansluitschema externe motor WA411C en WM105BI op WS9011MAX,WS1211MAX,ES1211MAX,ES1511MAX


If the wiring is not properly connected as presented below, a overload may occur with damage to the motor and circuit board. This is NOT under warranty!	
WA411C	WS/ES MAX
Wire	Connection position
Red / Rood	Speed 1 / Snelheid 1
White / Wit	Speed 2 / Snelheid 2
Brown / Bruin	Speed 3 / Snelheid 3
Black / Zwart	Speed 4 / Snelheid 4
Green/yellow / Groen/Geel	Ground / Aarde
Blue / Blauw	Neutral / Nul




WA411C outer wall model / Gevelmodel externe motor



ES / WS model

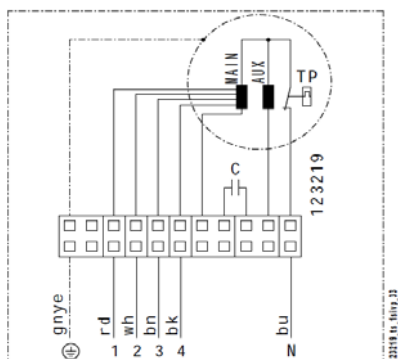

Connection schedule external motor / aansluitschema motor

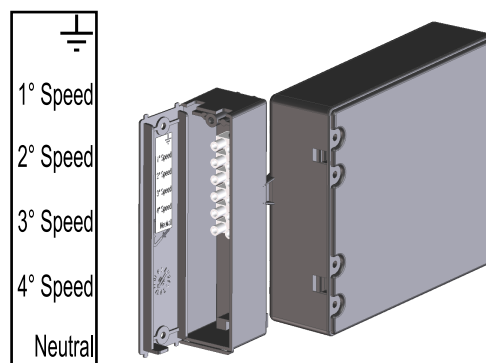


Connection on the hood / Aansluiting op de afzuigkap

If the wiring is not properly connected as presented below, a overload may occur with damage to the motor and circuit board. This is NOT under warranty!	
WM105BI	WS/ES MAX
Wire	Connection position
White / Wit	Speed 1 / Snelheid 1
Grey / Grijs	Speed 2 / Snelheid 2
Red / Rood	Speed 3 / Snelheid 3
Black / Zwart	Speed 4 / Snelheid 4
Green/yellow / Groen/Geel	Ground / Aarde
Blue / Blauw	Neutral / Nul



WM105BI roofmodel / zoldermodel externe motor

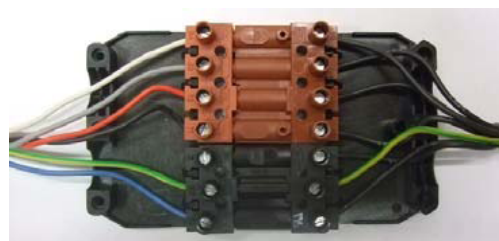

if necessary please remove plug at the end of the cable before connecting to the hood.